

Altair® HyperWorks®

2022.2

Browse Library Content

Review library content using the **Library Viewer**.

1. In the Part Browser, right-click on the part assemblies or part(s) and select one of the following:
- **Representations** > (and then) **Add** > (and then) **browse Library** the context menu.

◦ **Library** > (and then) **Library Viewer** the context menu.

The **Library Viewer** opens.

2. Select the Part that contains the representations you would like to review.
- A list of properties associated with the Part are displayed in the Properties pane.

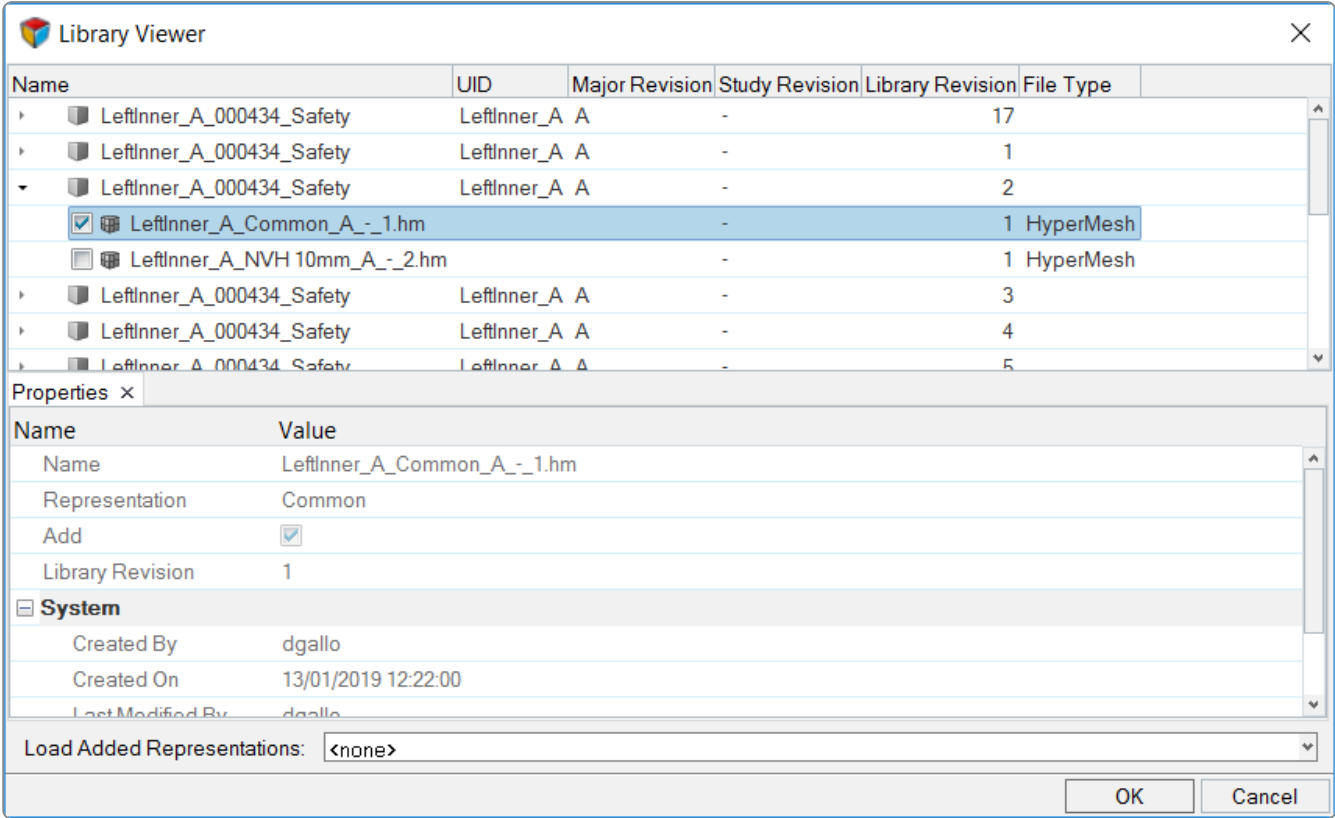


Figure 1. Library Viewer