

Altair® HyperWorks®

2022.2

Unload Representations

Unload part representations from a session.

1. In the Part Browser, right-click on the model, part assemblies, or parts and select **Representation** > (and then) **Unload** from the context menu.
2. In the **Confirm Unload Representation** dialog, click **Yes** to unload the selected representations.

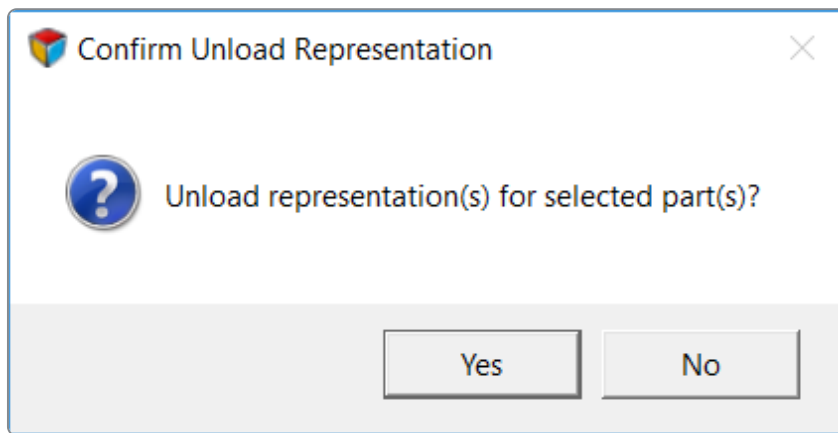


Figure 1.