

# Altair® HyperWorks®

2022.2

## Add Representations from the Part Library

1. In the Part Browser, right-click on a part/part assembly and select **Representations** > (and then) **Add** > (and then) **from Library** from the context menu.
2. In the **Add Representations from Library** dialog, select representations to add.
3. **Optional:** To simultaneously add and load representations, select representations to load from the Load Added Representations list.
4. Click **OK**.

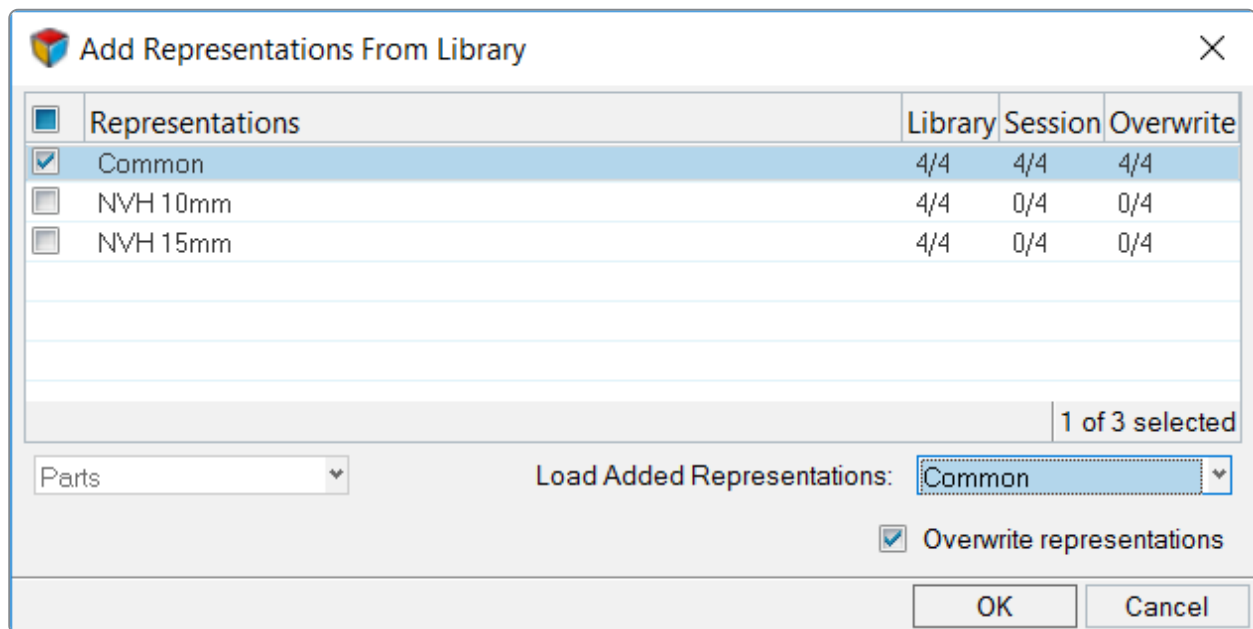


Figure 1.