

Altair® HyperWorks®

2022.2

Delete Representations from the Part Library

1. In the Part Browser, right-click on part assemblies or parts and select **Representations** > (and then) **Delete** > (and then) **from Library** from the context menu.
2. In the **Delete Representations From Library** dialog, select representations to be deleted.
3. Click **OK**.

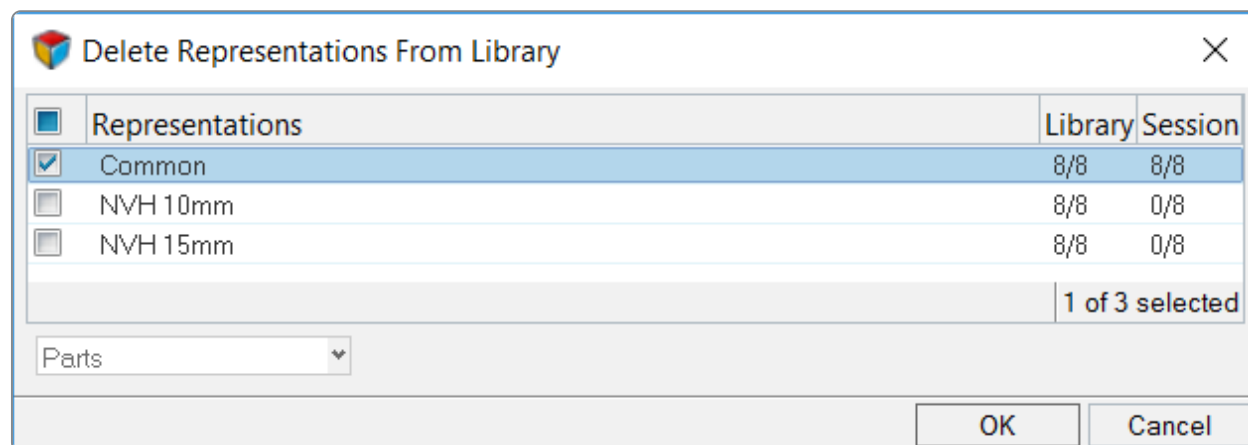


Figure 1.