

Altair® HyperWorks®

2022.2

Load Representations from the Part Library

After importing a BOM that has representations saved in the Part library, you can load the saved representations.

1. In the Part Browser, right-click on a part/part assembly and select **Representations** > (and then) **Load** > (and then) **from Library** from the context menu.
2. In the **Change Representation** dialog, Library tab, select representations and click **OK**.

The selected representations are loaded to the Representation folder on the file system. Similarly, every time a BOM is imported, files are loaded to the Representations folder, if you retrieve them from the Part Library.

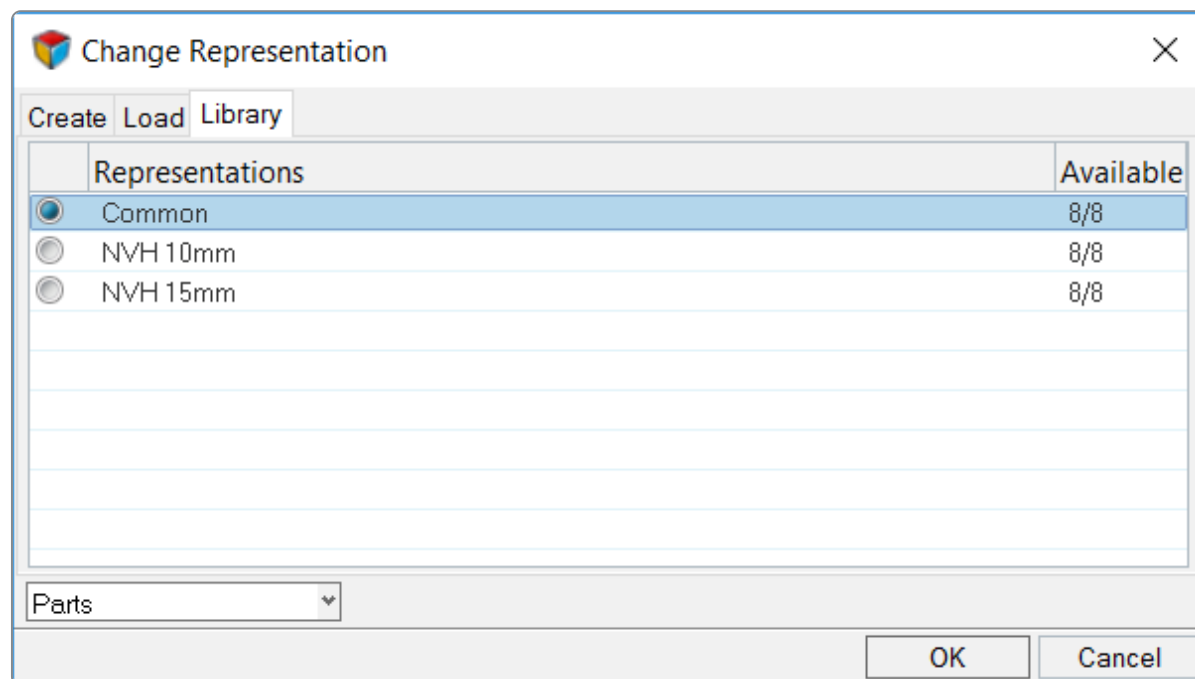


Figure 1.