

Altair® HyperWorks®

2022.2

Delete Representations from the Current HyperMesh Session

1. In the Part Browser, right-click on part assemblies or parts and select **Representations** > (and then) **Delete** > (and then) **from Session** from the context menu.
2. In the **Delete Representations** dialog, select representations to be deleted.
3. To remove representations from the Part Library, select the **Delete representation from library** checkbox.

Note: The Study version will be incremented if a representation is deleted from the Library.

4. Click **OK**.

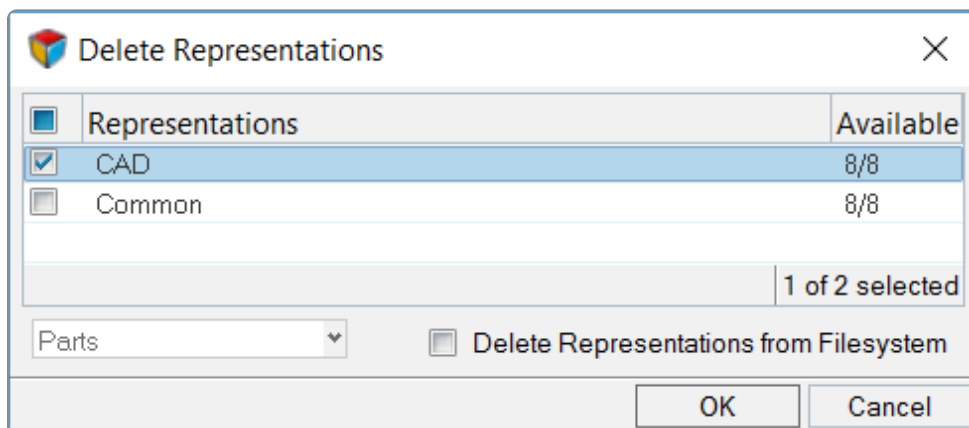


Figure 1.