

## Maintenance and Care

1. Always ensure to clean the appliance only after it has cooled down and the plug is removed from the electric socket.
2. To clean the appliance use a soft and clean damp cloth.
3. It is important to clean dust and lint regularly from the rear grill and clean it with a soft brush.
4. Never use any chemical, alcohol, thinner, benzene or remover to clean the appliance.
5. Never immerse the appliance in water or any other liquid to clean.
6. After cleaning the appliance keep the appliance in a safe and dry place free of dust or hang it with the hanging loop.
7. Do not wind/wrap the main wire cord around the appliance.

## Electromagnetic fields (EMF)

This appliance meets the standards of electromagnetic fields (EMF). If handled properly according to the instructions in this User Manual, the appliance is safe to use.

## Environment

To protect the environment, don't discard the appliance with the normal household waste at the end of its life. It is recommended / suggested to dispose off the appliance at the authorized or registered e-waste dismantler (s) / recycler (s) to save the environment. By doing this, you can help to preserve the environment and also some materials can be recycled or recovered in this way.

## Warranty

Vega Industries Private Limited hereinafter referred to as "VEGA" offers warranty only on it's personal care appliances (VEGA Hair Straightener, VEGA Hair Dryer and VEGA Hair Curler only) against any manufacturing defect for a period of two years from the date of purchase of the appliance. This non-transferable warranty is only for the first end user on purchase from "VEGA" dealer. "VEGA" will repair or replace the appliance on the terms and conditions mentioned as below:

## Terms and Conditions

1. Warranty will be valid only when the valid warranty card and original purchase invoice of the appliance are presented together for rendering our services.
2. The warranty card must have the dealer stamp which should be legible along with the date of purchase mentioned clearly in the (DD/MM/YYYY) format. The warranty will not be valid and accepted in case the dealer stamp is not there on the warranty card or if the same is not legible.
3. Customer has to show together the original warranty card and original purchase invoice. In the event of failing to do so, the warranty will not be valid.
4. "VEGA" reserves the right to decline all warranty services, if the above documents are not presented or if the information contained therein is not complete.
5. Warranty will not be valid if the original purchase invoice or the original warranty card is found tampered with.
6. Warranty takes care of only manufacturing defect of the product during warranty period.
7. "VEGA", at its sole discretion will repair or replace the defective parts or replace the appliance if required.
8. Repair of the appliance which is under warranty will be carried out by "VEGA" only. In such cases, "VEGA" carries out repairs or replacement of any part or replacement of the appliance during the said warranty period. The warranty shall thereafter continue only for the remaining period of the warranty.

9. This warranty does not cover any form of damage resulting from dust, foreign object, fire, water, fall, input voltage fluctuation, mishandling, commercial use, dismantling, lightening, flood or any act of natural calamity and use contrary to the operations specified in the User Manual supplied with the appliance.
10. This warranty is valid only in India.
11. "VEGA" will not accept any responsibility for damage if the appliance is dismantled or repaired (including repair of any accessories or attachments) by a person not authorized by "VEGA". In such a case the warranty will not be valid.
12. "VEGA" will not cover any responsibility for damage due to improper care of the appliance or loss arising out of mishandling or one that incurred during transit.
13. This warranty does not cover the cost of transportation of the product from the place of the customer to the service center of "VEGA".
14. "VEGA" shall not be liable or be deemed to be in default for any delay or failure in performance resulting directly or indirectly from causes beyond its reasonable control.
15. This warranty restriction in no way affects your right under statutory laws.
16. In the event of any difference or dispute arising with reference to the terms and conditions of the warranty or their interpretation, the same shall be referred to a sole arbitrator, who shall be appointed by the Company's Directors. The decision of the sole arbitrator shall be final and binding on both the parties. Such arbitration proceedings shall be held at New Delhi and provision of the Arbitration & Conciliations Act 1996 shall apply to the arbitration proceedings.
17. In case you have any questions, please feel free to contact us on our customer care number at +91-120-4170000 (Monday to Friday 10am-5pm 1ST) excluding holidays or email us at [customercare@vega.co.in](mailto:customercare@vega.co.in)

## Technical specifications

Voltage: 220-240V, 50/60Hz  
Power: 1000W



### Vega Industries Private Limited

B-43, Sector-80, Phase-II  
Noida, U.P. - 201305, India

[www.vega.co.in](http://www.vega.co.in)

# VEGA

## User Manual

INSTA GLAM 1000

Hair Dryer

### IMPORTANT


- Please read this User Manual carefully before operating this appliance.
- While purchasing the appliance, please ensure that the Warranty Card is enclosed.
- Images used herein are digital depiction of the product and may differ from the physical product inside.

# VEGA

## VEGA HAIR DRYER

Thank you for selecting your new VEGA Hair Dryer appliance. This VEGA Hair Dryer is known for its performance and reliability. This manual provides you with all the information you need such as how to use, safety instructions, styling tips, taking care of your hair dryer to give you beautiful hair.


### Unit Identification

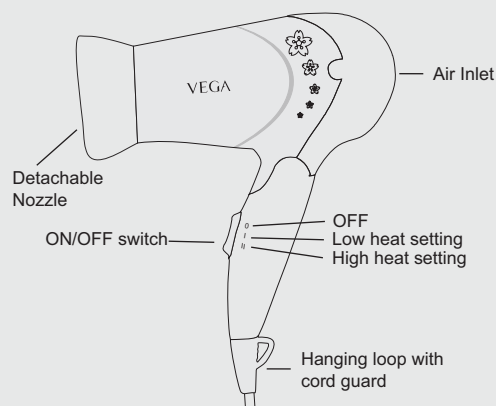

## Important general safety instructions

Please note it is important to read this VEGA User Manual for all the safety instructions before using your VEGA Hair Dryer appliance and save it for future reference or for any new user. Do not use the appliance if you do not understand or cannot read any instruction, direction, information, caution and warning given in this User Manual. The safety instructions explained in this User Manual help you to use the VEGA Hair Dryer appliance safely and correctly, and also to prevent you from injuring yourself or others.

### WARNING

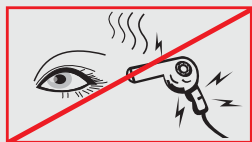

### WARNING

Not following any of the below mentioned instructions may cause malfunction, fire, burns, explosions, short circuit, electric shock or any other injury.

- Keep this appliance out of the reach of children or infants.
- This appliance is not intended for use by persons (including children and infants) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given proper supervision and instructions concerning the use of this appliance by a person responsible for their safety.
- Do not insert any object/particle into the inlet and outlet grills to avoid electric shock and any damage to the appliance.
- Never block the inlet or outlet grills.
- Always ensure that the inlet and outlet grills are free from obstruction such as household fluff, loose hair etc.
- Keep your hands away from the air outlet, it may cause burns. If the air inlet is damaged, stop using the hair dryer immediately.
- Make sure that hair does not get sucked into air inlets.
- Always ensure to keep your hair at least 10cm away from the air inlet while using the appliance. Failure to do so may result in your hair getting sucked in and trapped in the hair dryer.
- While using the appliance, always keep your hair away from the air outlet. Failure to do so may result in getting hair burnt.
- Do not leave the appliance unattended while it is plugged in the electric socket or switched on.
- Unplug the appliance immediately if you face any problem while using it.
- Never block the air openings of the appliance or place it on a soft surface, such as a bed or couch, where the air openings may get blocked. Keep the air openings free of lint, hair, etc.
- Stop using the hair dryer immediately if it does not produce constant air or the cord/plug is damaged or becomes too hot or if the plug does not fit properly in the electric socket.
- The hair dryer has an automatic overheat cut out feature. It will stop working if it overheats. Switch off the hair dryer and unplug it from the socket. Let the dryer cool down for 5-8 minutes before switching it on again.
- Always switch off the hair dryer ("0" position) after use and unplug it from the electric socket. Failure to do so may lead to fire and/or an accident.
- To protect against electric shock, never allow the appliance, its cord or plug to come into contact with water or any other liquid.
- Do not use this appliance near water or any other liquid.
- Do not use or place this appliance near basin, sink, bath tub or at any place from where this appliance may fall in any vessel containing water or any other liquid.
- Never reach for any electrical appliance that has fallen into water or any other liquid. Immediately switch off the power supply at the main breaker and, then unplug.
- Do not attempt to re-use the appliance if it has been submerged in water or any other liquid.
- Do not handle this appliance with wet hands. Ensure that your hands are completely dry before operating or adjusting any switch on the appliance or touching the plug.
- Before you connect this appliance, ensure that the voltage indicated on the appliance corresponds to the local power voltage.
- If the plug does not fit fully in the electric socket, reverse the plug. If it still does not fit, contact a qualified electrician.
- Do not use this appliance near flammable objects such as benzene, aerosol cans, spray products or any other toiletries.
- Always unplug the appliance after use even if the appliance is switched off, the electric current still reaches the device.

- Do not cover the appliance with any article, such as a towel or clothing while the appliance is hot. Keep it on a heat resistant surface.
- Use this appliance only for its intended use as described in this manual.
- Do not use any attachments or accessories or parts of any other manufacturer or any equipment that VEGA does not recommend.
- Do not use an extension cord to operate this appliance.
- Do not place the appliance on plastic or any material/surface sensitive to heat while it is operating or if it is hot.
- Do not use this appliance with any voltage converter.
- Always inspect the appliance before use, do not use the appliance if the cord or plug seems damaged.
- Do not use the appliance if it is not working properly or smells of burning. Stop using the appliance immediately.
- Do not wind/wrap the main wire cord around the appliance.
- Avoid using thinner, benzene or any other solvent to clean the appliance.
- For additional protection, we advise you to install a residual current device (RCD) in the electrical circuit that supplies electrical power to the bathroom. This RCD must have a rated residual operating current not higher than 30mA. Ask a qualified electrician for advice.
- This appliance is intended for household use only.
- We do not accept any responsibility for damage to the appliance, person/s, or other item/s caused by misuse, abuse or non compliance with the instructions mentioned in this User Manual.

## How to use the Hair Dryer

1. Before operating this appliance, you must always ensure that the voltage indicated on the appliance corresponds to the local power voltage.
2. Ensure that your hands are thoroughly dry before you operate the hair dryer.
3. Insert the plug of the hair dryer into the electric socket and turn it on.
4. This hair dryer comes with 2 heat/speed settings. To start the hair dryer, switch on to the first setting and to change the heat/speed setting, wait for 30 seconds and switch to the next setting.
5. Use the appliance in the correct way by holding the handle when in use.
6. For gentle drying of slightly wet hair, switch the dryer to the (I) Low heat setting.
7. For fast drying of wet and thick hair, switch the dryer to (II) High heat setting.
8. Once you are done with the hair drying process, turn off the appliance by switching it to "0" position, unplug the cord and allow the appliance to cool down completely before storing.

## Styling tip for different styles

- Wash your hair and blow dry to remove excess moisture.
- Use the hair dryer along with your Vega hair brush while, directing hot air through a section of hair at a time. Direct air flow at hair, not on the scalp.
- Hair dryer models having concentrator/nozzle help to concentrate air flow into a specific area enabling you to have more control while styling.
- To avoid over drying, do not concentrate on one section for a long period of time. Keep air flow moving as you style.
- To create curls, use Vega hot curl brush with hair dryer.
- To create extra volume, turn head upside down while drying. Position the air flow towards the roots for maximum lift. When hair is dry, toss head back and brush hair into place.
- Work with hair in sections when creating a super straight look. Using a Vega flat brush, hold hair firmly in each section as you dry through to ends.
- Natural looking waves are easily created by grasping the hair and scrunching it between fingertips while drying.