


Below are the pins exposed @ the MSP-EXP432P401R BoosterPack connector

Also shown are functions that map with the BoosterPack pinout standard. Refer to the MSP432P401R Datasheet for additional details.
NOTE: Some LaunchPads & BoosterPacks do not 100% comply with the standard, so please check your specific LaunchPad to ensure pin compatibility.

(!) Denotes I/O pins that are interrupt-capable
** Some LaunchPads do not have a GPIO here

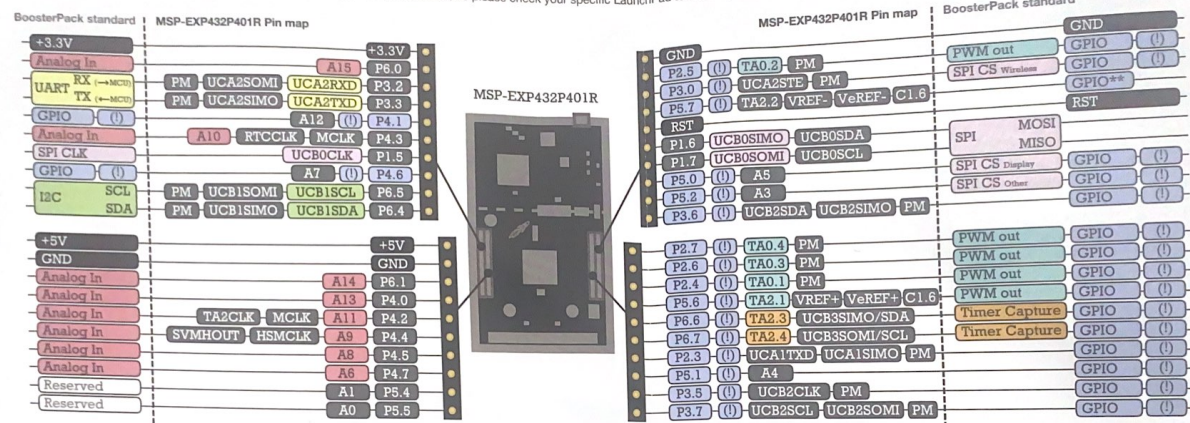

Resources @
ti.com/launchpad

Code examples
Open Source Design Files
Documentation
Launchpad projects
Videos
Tutorials
Other TI products