



- If the temperature is controlled by room temperature, the set temperature (in home page) can be adjust as usual.
- This function is invalid if the unit is in holiday away or holiday home mode, and the function turns to valid automatically (if this function is set to be active) when the unit quits holiday away or holiday home mode.

## Zone 1 heating mode

Heating temperature curve setting for Zone 1.

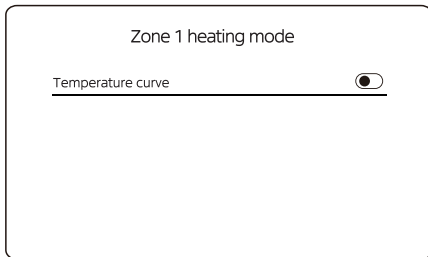

Press  and you can see the interface below