


Figure 3-9.5: High temperature curves for cooling mode¹

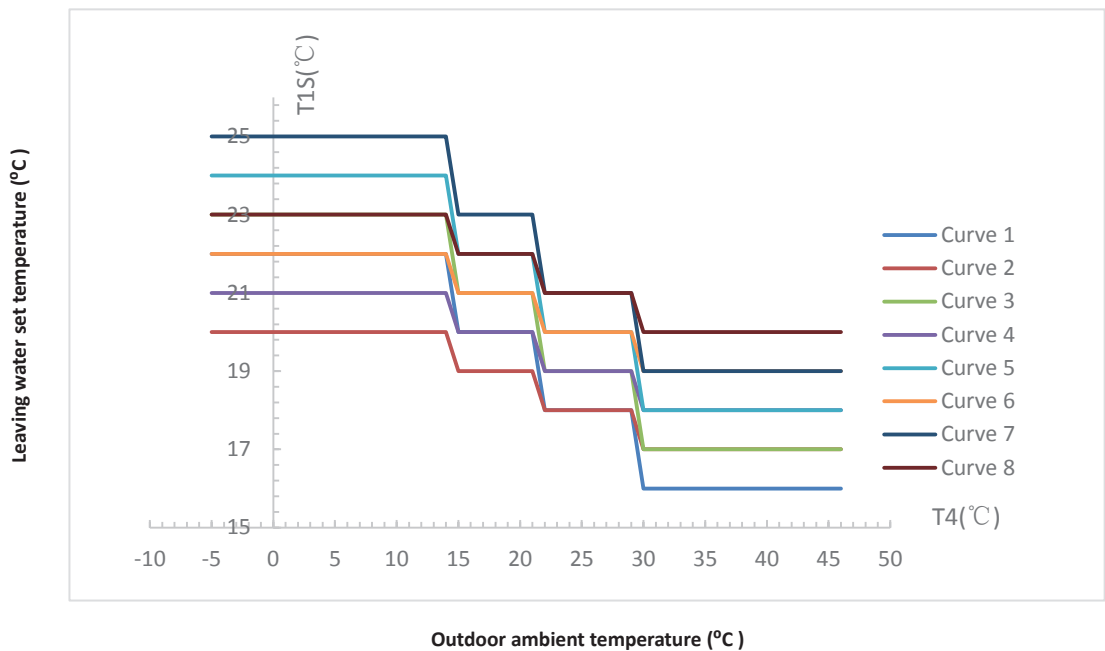

- Notes:
1. It only has the curves of the high temperature setting for cooling, if the high temperature is set for cooling.
 2. Curve 4 is default in high temperature cooling mode and curve 6 is default in ECO mode.

Figure 3-9.6: Automatic setting curve for heating mode


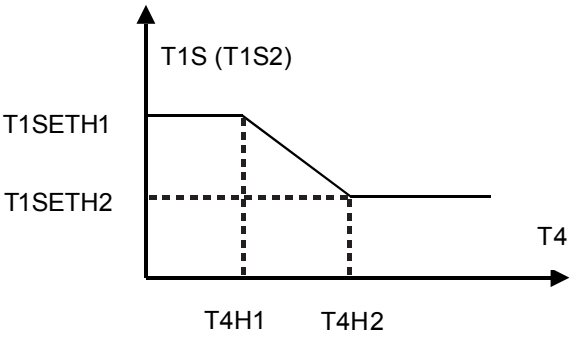


Figure 3-9.7: Automatic setting curve for cooling mode

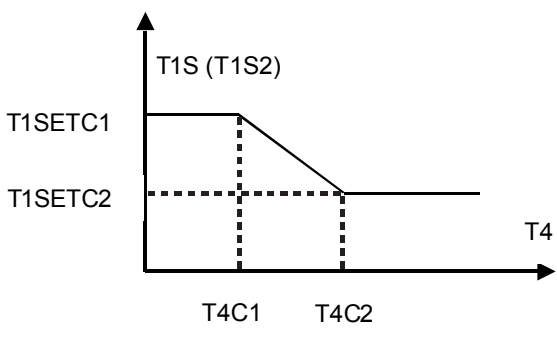

The setting of T1SETH1, T1SETH2, T4H1, T4H2 refer to Part 3, 7.6" HEATING MODE SETTING Menu" and T1SETC1, T1SETC2, T4C1, T4C2 refer to Part 3, 7.5" COOLING MODE SETTING Menu".