


NOTE

You might see less items than what is illustrated above. The number of visible items depends on your actual application.

Quit Holiday home mode in advance:

When Holiday home mode is active, press any key on the wired controller. Then, a confirmation page appears.. For more information, see FAQ.

5.2 Weather temp. settings

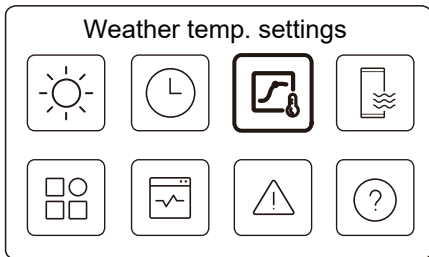

The set water temperature is regulated automatically depending on the outdoor ambient temperature.

This function is only for space heating and space cooling. When the function is active, the unit will apply temperature curves if the current operation mode is consistent with the activated function