
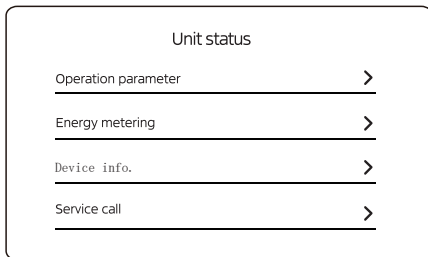


5.5 Unit Status

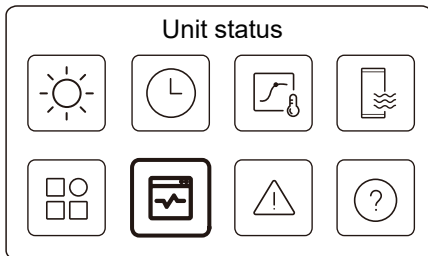

Operation parameter

A list of parameters related to the units (both master units and slave units).

You can check the current status of each parameter.

Press  or  to switch the unit.

-Ask your installer for more information of each parameter.