



4.4 Mode Change

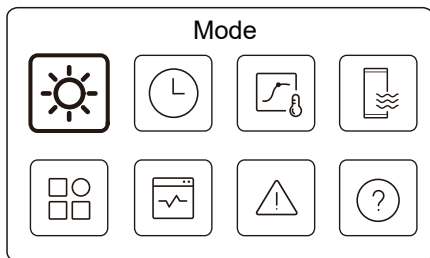

Access icon 1 in Page C to change the operation mode.

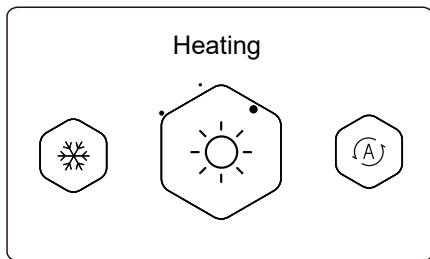

Press ◀ or ▶ to change the operation mode.
Three modes are optional: Heating, Cooling, and Auto.