


3.2 Interface Switch

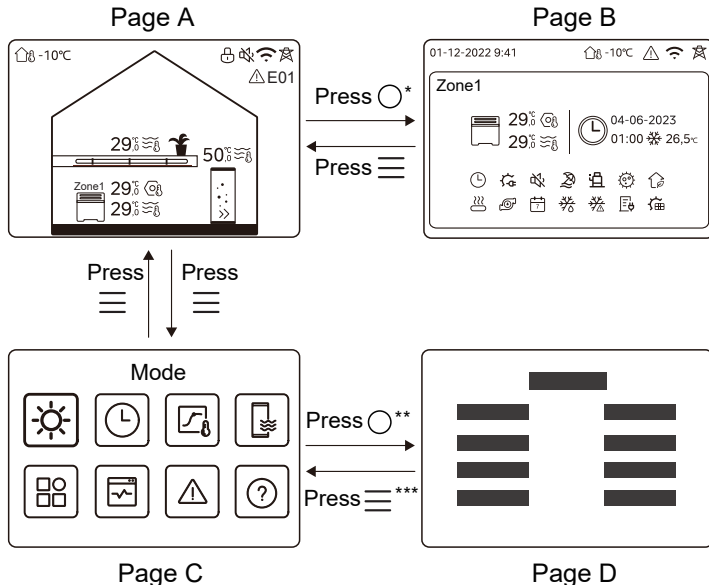

* To switch from Page A to Page B, select an appliance first.

** To switch from Page C to Page D, select a target icon first.

***To switch from Page D to Page C, press several times (depending on the page level).