



6 kW

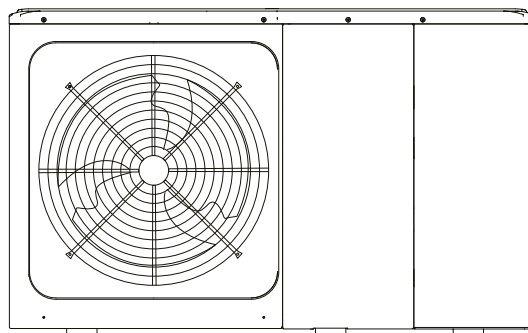

8/10/12/14/16 kW

Internal layout: 12~16kW(3-phase) for example



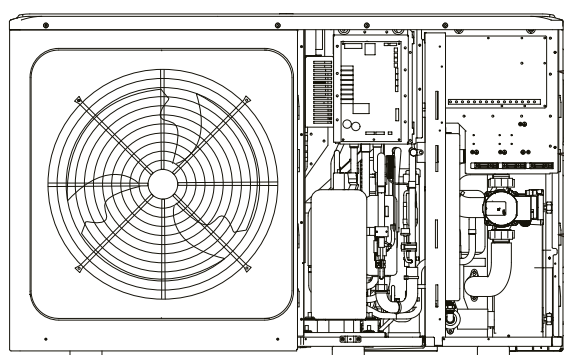


Electric Control System

Terminal Block



Hydraulic System

Refrigerant System

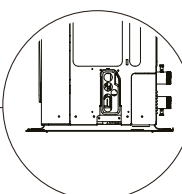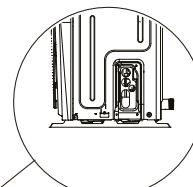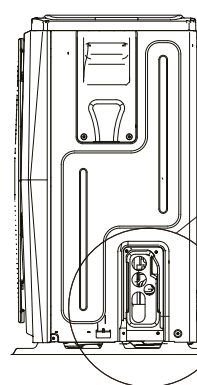

8/10/12/14/16 kW

Please remove the hollow plate after installation.

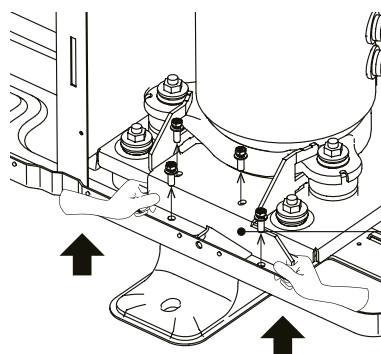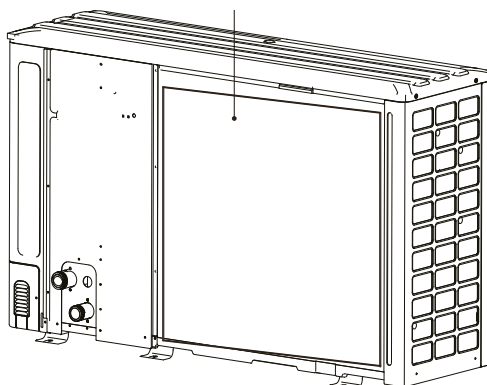

Remove the transportation support

12/14/16 kW

NOTE

The picture and function described in this manual contain the backup heater components. Pictures in this manual are for reference only, please refer to the actual product.

	1-phase			3-phase				
Unit	6 RY1	8 RY1	10 RY1	8 RY3	10 RY3	12 RY3	14 RY3	16 RY3
Capacity of backup heater	3 kW (1-phase)			9 kW (3-phase)				
	Backup heater (standard)							