


Figure 3-2.9: Installation with obstacles behind the unit

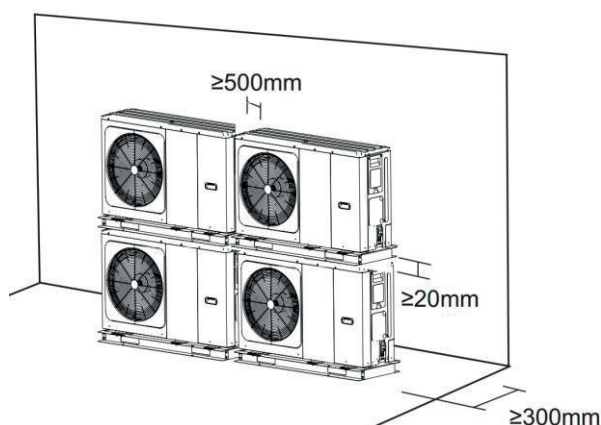

1.1.2 Installation in Rows

Figure 3-2.10: Single row installation

Table 3-2.3: Single row installation spacing requirements

Model	A(mm)	B1(mm)	B2(mm)	C(mm)
6KW	≥1500	≥500	≥150	≥300
8-16KW	≥2000	≥1000	≥150	≥300

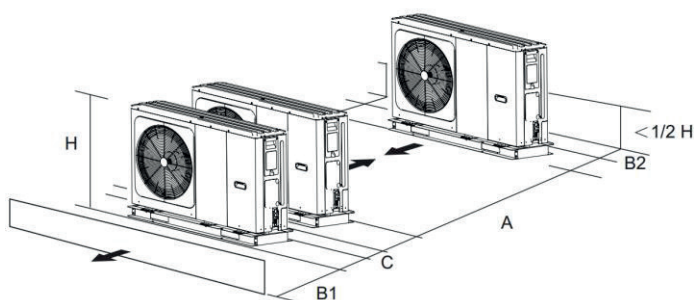


Figure 3-2.11: Multi-row installation

Table 3-2.4: Multiple row installation spacing requirements

Model	A(mm)	B1(mm)	B2(mm)	C(mm)
6KW	≥2500	≥1000	≥300	≥600
8-16KW	≥3000	≥1500	≥300	≥600


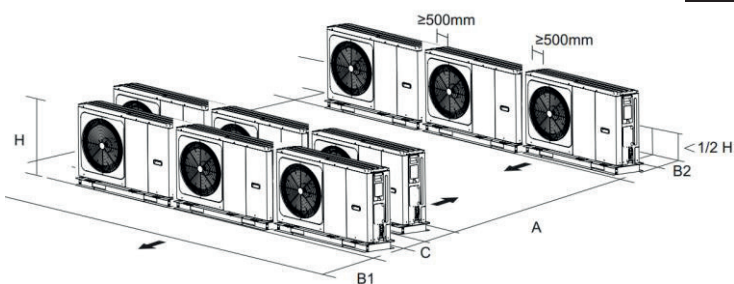


Figure 3-2.12: Remove the transportation support

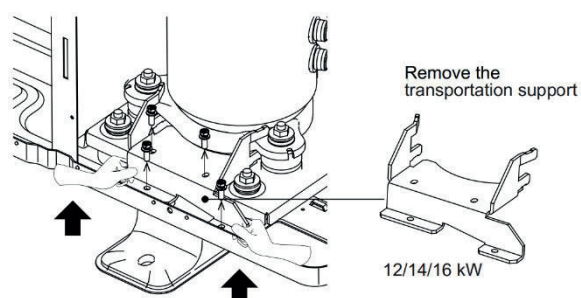

2.10 Transportation support

For 12/14/16kW model, there is a transportation support which is used to protect tubes from breaking during transportation and this support should be taken off before turning on the heat pump.