


## 3 USER INTERFACE

### 3.1 Names and Functions

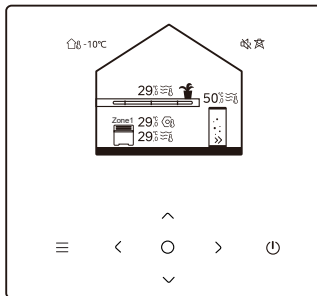

Icon	Name	Definition
≡	Menu/Return*	Press to access the menu page (from the home page) / return to the previous page (from a page other than the home page)
○	Confirm	Confirm a selection / Save settings / Access the next page
⏻	ON/OFF	Turn on/off zone 1/zone 2/DHW Press and hold for 3 seconds to turn on/off all appliances (zone 1 / zone 2 / DHW).
^ v < >	Navigation: upward, downward leftward, rightward	Press to navigate the cursor to adjust settings (holding it for 1 second can start quick adjustment)

\* Hold for 2 seconds to return to the main page.