


## NOTE

About AUTO mode:

- The unit selects the operation mode automatically based on the outdoor ambient temperature and some advanced settings of the installer.

You can see the interfaces as below when the unit is running in different modes.

Heating:

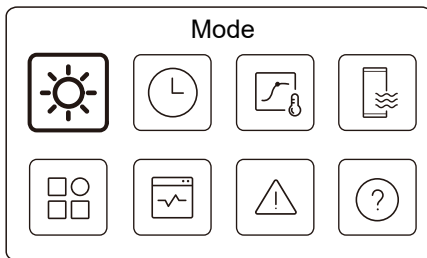

Cooling: