




9.3.4 Controls parts for backup heater

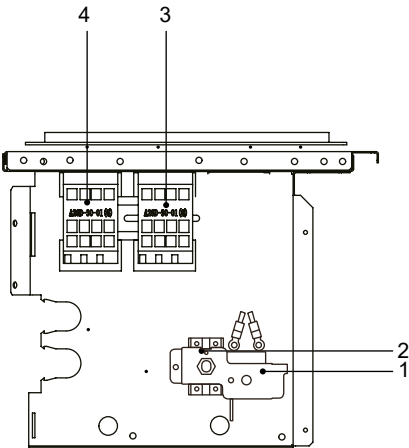

1-phase 6kW with backup heater(1-phase 3kW)

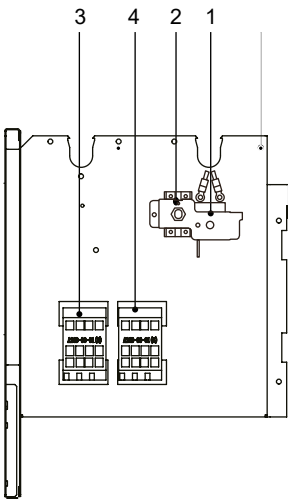

1-phase 8-10kW with backup heater(1-phase 3kW units RY1)

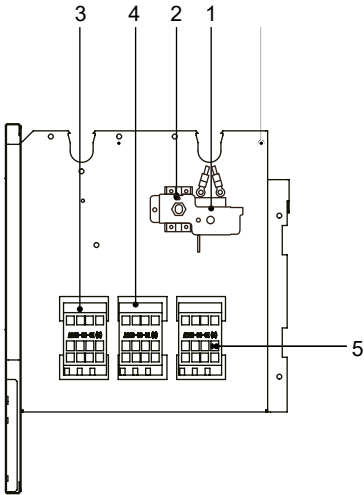

3-phase 8-16kW with backup heater(3-phase 9kW units RY3)

Code	Assembly unit	Code	Assembly unit
1	Auto thermal protector	4	Backup heater contactor KM2
2	Manu thermal protector	5	Backup heater contactor KM3
3	Backup heater contactor KM1		