


## 5.3 DHW settings

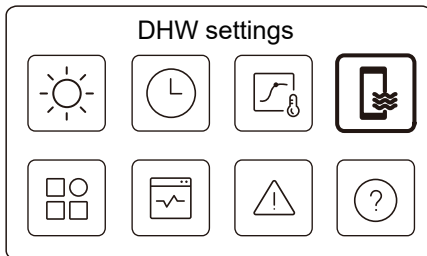

### NOTE

Invisible if DHW MODE is disabled.

The status indicator on the right of the interface shows “ON” when the setting is active, and “OFF” when the setting is inactive.

