

Logitech Steering Wheel Settings for CarSim DS and TruckSim DS

Note This document applies to the Logitech G25 and G27 wheel/pedal/shifter set. This document was written based on a computer running Windows 7 and describes accessing information from the Windows Control Panel. Your machine settings may vary.

In order to use the Logitech wheel/pedal/shifter sets in CarSim DS and TruckSim DS, you must modify the default settings of the Logitech wheel/pedal/shifter set.

From your computer's Control Panel locate the game controllers. If you do not see this at the root level of the **Control Panel** they might be located under **Devices and Printers**. Right-click on the G25 / G27 Racing Wheel icon and select **Game controller settings** to bring up the Game Controllers window. See Figure 1.



Figure 1: Logitech Game Controllers window

On this window click the **Properties** button to bring up the Logitech G25 / G27 Racing Wheel Properties window. See Figure 2.

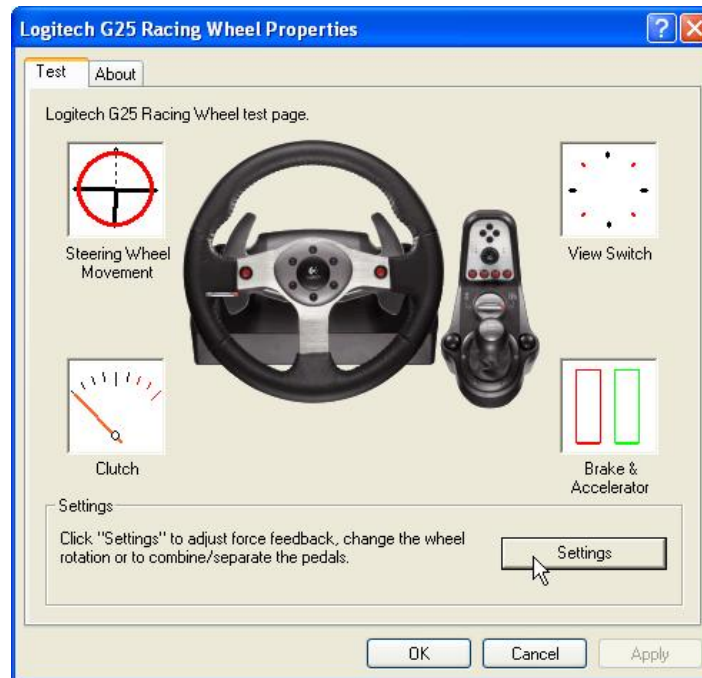


Figure 2: Logitech Racing Wheel Properties window

As shown in Figure 2, click on the **Settings** button to bring up the Settings screen (Figure 3). Uncheck **Combined** (single axis – used for most games), and make sure the **Degrees of Rotation** is set to a reasonable value (usually 900 degrees), then close this window. The modifications to the Logitech settings are now complete.

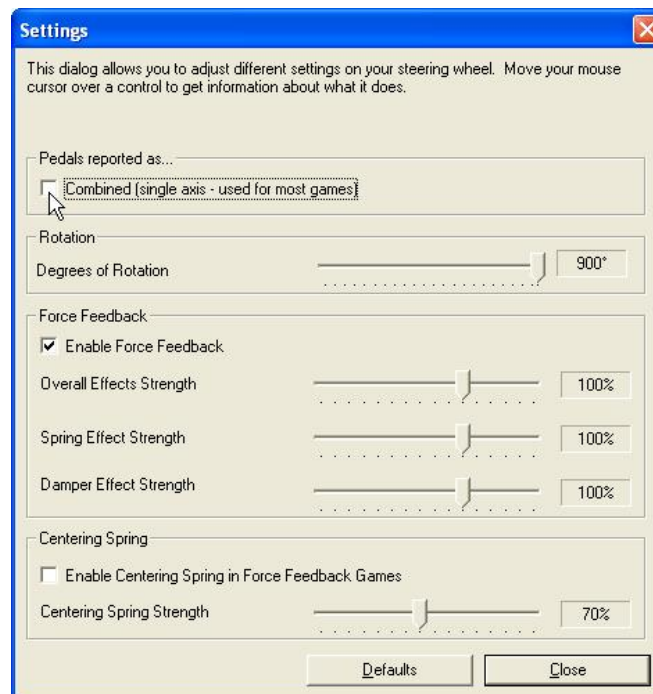


Figure 3: Logitech Settings window