

WARRANTY

Proof of purchase is required to access this warranty program, which is in effect from the date of purchase. Customers will be subject to parts, shipping, and handling fees if unable to provide proof of the purchase or after the warranty has expired.

If you have any questions or problems, you can call our customer service department at 1-800-963-0211, 8 a.m. - 6 p.m., EST, Monday - Thursday, 8 a.m. - 5 p.m., EST, Friday.

Limited Warranty

5-Year Warranty on stainless steel burners.

1-Year Warranty on all parts affecting the operation of the gas grill due to damage.

Warranty Provisions:

This warranty is non-transferable and does not cover failures due to misuse or improper installation or maintenance.

This warranty is for replacement of defective parts only. We are not responsible for incidental or consequential damages or labor costs.


This warranty does not cover corrosion or discoloration after the grill is used, or due to lack of maintenance, hostile environment, accidents, alterations, abuse or neglect.

This warranty does not cover damage caused by heat, abrasive and chemical cleaners, or any damage to other components used in the installation or operation of the gas grill.

Some states do not allow the limitation or exclusion of incidental or consequential damages, so the above limitations or exclusions may not apply to you. This warranty gives you specific legal rights, and you may also have other rights that vary from state to state.

EXPLODED VIEW

For replacement parts, call our customer service department at 1-800-963-0211, 8 a.m. – 6 p.m., EST, Monday - Thursday, 8 a.m. - 5 p.m., EST, Friday.

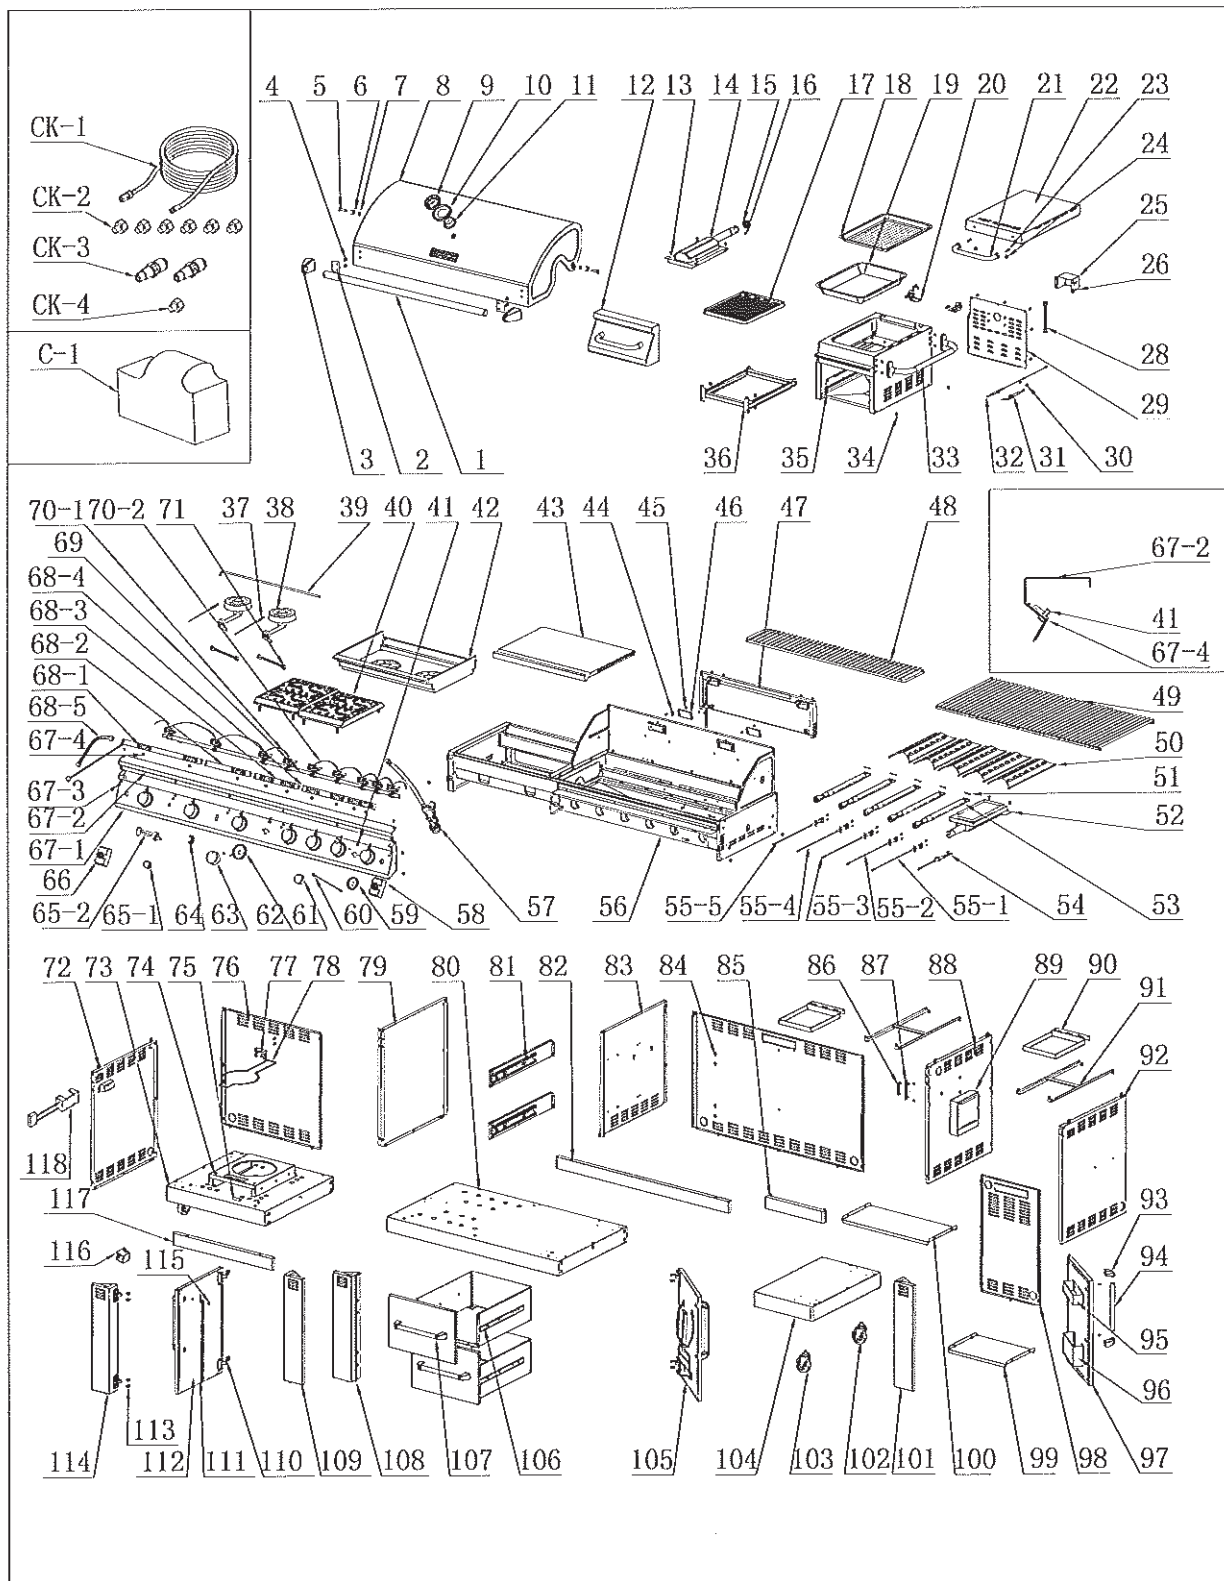

REPLACEMENT PARTS LIST

| Part | Description | Part # | Part | Description | Part # |
|------|------------------------------|--------------------|------|-------------------------------|-------------------|
| 1 | Hood Handle | 6318B-6003 | 32 | Flame Sensor | 6318B-8707 |
| 2 | Gasket | 6318B-6004 | 33 | FSH Handle | 6318B-7110 |
| 3 | Handle Fitting | E3520-00-4007 | 34 | Screw | 1/4 -20 x 3/8 in. |
| 4 | Screw | 1/4 -20 x 5/8 in. | 35 | FSH Housing | 6318B-7100 |
| 5 | Screw | 5/16 -18 x 3/2 in. | 36 | FSH Grate Tray | 6318B-7330 |
| 6 | Bushing | 6318B-0001 | 37 | Ignition Pin (Side Burner) | L110601021 |
| 7 | Flange Nut | 5/16 -18 | 38 | Side Burner | L110639006 |
| 8 | Hood | 6318B-6000 | 39 | Shaft, Side Burner | 6318B-25-2001 |
| 9 | Temperature Gauge | 6318B-8012 | 40 | Grate, Side Cooker | 6318B-25-2600 |
| 10 | 3.0 in. Bezel | 6318B-6005 | 41 | Screw | ST4.2 x 10 |
| 11 | Washer, Temperature Gauge | 2518-3-6002 | 42 | Side Burner Mounting Plate | 6318B-25-2301 |
| 12 | FSH Tray Front | 6318B-7310 | 43 | Cover, Side Burner | 6318B-25-2002 |
| 13 | Screw | 3/16 -24 x 3/8 in. | 44 | Bracket, Lamp Screen | E3520-00-2442 |
| 14 | FSH Burner | 6318B-8706-1 | 45 | Flange Nut | 5/32-32UNC |
| 15 | FSH Nozzle Assembly | 6318B-8706-2 | 46 | Lamp Screen | E3520-00-8017 |
| 16 | Screw | 5/32-32 x 1/4 in. | 47 | Light Hood | 6318B-38-2702 |
| 17 | FSH Grate | 6318B-7303 | 48 | Warming Rack | 6318B-38-2001 |
| 18 | Screen Pan | 6318B-8704 | 49 | Cooking Grid | 6318B-38-2002 |
| 19 | Pan | 6318B-8703 | 50 | Flame Step | 6318B-38-2003 |
| 20 | Hinge | 6318B-7600 | 51 | Pin | R-Ping |
| 21 | FSH Lid Handle | 6318B-7120B | 52 | Sear Burner | 6318B-8002 |
| 22 | FSH Lid | 6318B-7120A | 53 | Main Burner | SH318B-2004 |
| 23 | Screw | 5/32 -32 x 1.0 in. | 54 | Ignition Pin (Sear Burner) | 6318B-8004 |
| 24 | Rubber Insert | 3219B-8081 | 55-1 | Ignition Pin (Main Burner) | 6318B-2010-1 |
| 25 | Air Shutter Cover | 6318B-7001 | 55-2 | Ignition Pin (Main Burner) | 6318B-2010-3 |
| 26 | Screw | 3/16 -24 x 3/8 in. | 55-3 | Ignition Pin (Main Burner) | 6318B-2010-5 |
| | | | 55-4 | Ignition Pin (Main Burner) | 6318B-2010-7 |
| 28 | FSH Gas Hose | 6318B-8307 | 55-5 | Ignition Pin (Main Burner) | 6318B-2010-9 |
| 29 | FSH Rear Panel | 6318B-7401 | 56 | Burner Box | 6318B-2000 |
| 30 | Screw | 5/32 -32 x 3/8 in. | 57 | LP Gas Regulator | 6318B-8301 |
| 31 | Ignition Pin (FSH Burner) | 6318B-8709 | 58 | Electrical Igniter | DHLG-5A |

REPLACEMENT PARTS LIST

| Part | Description | Part# | Part | Description | Part# |
|------|--------------------------|-------------------|------|--|----------------------|
| 59 | Bezel, Small | 6318B-3002 | 87 | Magnet Housing | 6318B-38-1402 |
| 60 | Light, Sear Top | 6318B-8710 | 88 | Right Side Panel II | 6318B-38-1400 |
| 61 | Knob, Small | L3218-00-3001 | 89 | Control Box | 6318B-38-1410 |
| 62 | Bezel | SH3118B-3004 | 90 | Drip Tray | 6318B-1002 |
| 63 | Knob | E3518-00-3003 | 91 | Drip Tray Runner | 6318B-1910 |
| 64 | Switch, Light | E3520-00-8015 | 92 | Right Side Panel I | 6318B-1C00 |
| 65-1 | LED Knob | 6318B-3004 | 93 | Door Handle Seat | E3520-00-1703 |
| 65-2 | LED Switch | 6318B-8330 | 94 | Door Handle | 6318B-38-1502 |
| 66 | Electrical Igniter | DHLG-4A | 95 | Tool holder | 6318B-KAO-B-000 |
| 67-1 | Control Panel | 6318B-3001-1 | 96 | Tool Box | 6318B-KAO-A-000 |
| 67-2 | LED Installation Panel | 6318B-3001-2 | 97 | Right Door I | 6318B-38-1500B |
| 67-3 | Screw | 5/32-32 x 3/8 in. | 98 | Right Rear Panel | 6318B-1B00 |
| 67-4 | Washer | 4.0 mm | 99 | Right Shelf | 6318B-1F00 |
| 68-1 | LED Band(L1) | 631B-3001-1 | 100 | Left Shelf | 6318B-38-1500A |
| 68-2 | LED Band(L2) | 631B-3001-2 | 101 | Right Skirt | 6318B-38-1020 |
| 68-3 | LED Band(L3) | 631B-3001-3 | 102 | Caster, Locking | 6318B-8007 |
| 68-4 | LED Band(L4) | 631B-3001-4 | 103 | Caster | 6318B-8008 |
| 68-5 | Connect Wire | 631B-3001-5 | 104 | Right Base Panel | 6318B-1A00 |
| 69 | Manifold, Main Burner | 6318B-3200 | 105 | Right Door II | 6318B-38-1500 |
| 70-1 | Ignition Switch Wire | 6318-8304 | 106 | Drawer | 6318B-38-1700 |
| 70-2 | Ignition Switch Wire | 6318-8305 | 107 | Drawer Panel | 6318B-38-1700 |
| 71 | Side Burner Hose | 6318B-8003 | 108 | Left Skirt III | 6318B-38-1010B |
| 72 | Left Side Panel I | 6318B-25-1300 | 109 | Left Skirt II | 6318B-25-1020 |
| 73 | Left Base Panel | 6318B-25-1100 | 110 | Door Hinge | P3018-00-8009 |
| 74 | Tank Tray | 6318B-38-1120 | 111 | Match Holder | 3019L-1710 |
| 75 | Door Stopper | L3218-00-1112 | 112 | Left Door | 6318B-25-1400 |
| 76 | Left Rear Panel | 6318B-25-1200 | 113 | Screw | 5/32-32UNC x 1/2 in. |
| 77 | Bracket, Tank Ring | 2518SLN-1203 | 114 | Left Skirt I | 6318B-25-1010 |
| 78 | Safety Tank Ring | SH3118-1202 | 115 | Screw | 5/32-32 x 3/8 in. |
| 79 | Left Side Panel II | 6318B-38-1300 | 116 | Transformer | E3520-00-8016 |
| 80 | Middle Base Panel | 6318B-38-1100 | 117 | Left Beam | 6318B-25-1600 |
| 81 | Rail Assembly | 6318B-38-1900B | 118 | 9V Battery Box | 6318B-8310 |
| 82 | Long Beam | 6318B-38-1800 | C-1 | Cover | 6318B-8005 |
| 83 | Middle Panel | 6318B-38-1600B | CK-1 | 10 ft. Natural Gas Hose | 3019L-3300-NG |
| 84 | Rear Panel | 6318B-38-1200B | CK-2 | Main burner /FSH burner orifice $\Phi 1.38$ | 6318B-00-N1 |
| 85 | Right Beam | 6318B-1D00 | CK-3 | Side burner orifice $\Phi 1.55$ | 6318B-00-N2 |
| 86 | Magnet | SH3118B-1803 | CK-4 | Sear burner orifice $\Phi 1.45$ | 6318B-00-N3 |