



LG G Pad 8.0: Como desactivar la alarma que suena al desconectar el cargador.


1. Seleccionamos la aplicación de retail mode en el menú de aplicaciones:

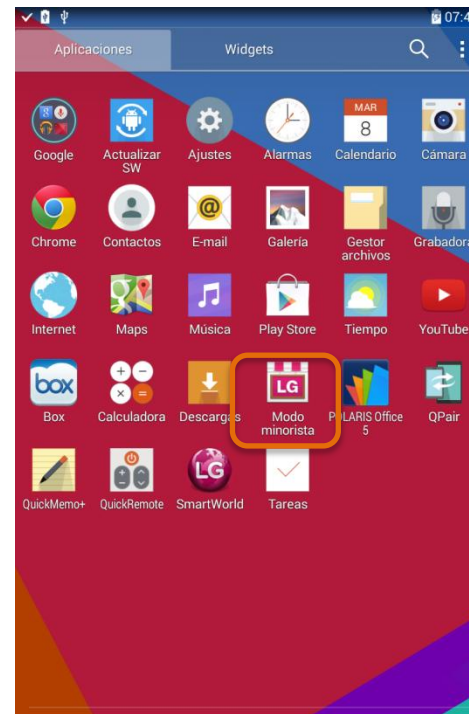

2. Al abrirla, nos solicita una contraseña, introducimos 483592 y a continuación seleccionamos Aceptar:

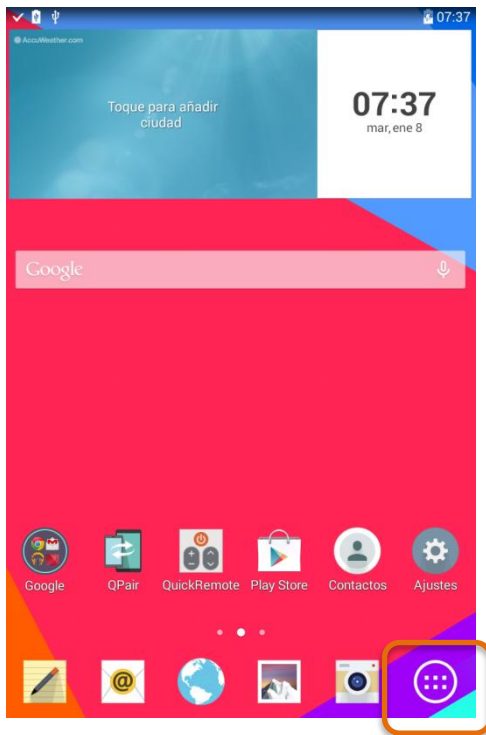

3. Se abre el menú de ajustes donde seleccionamos Ajustes antirrobo:

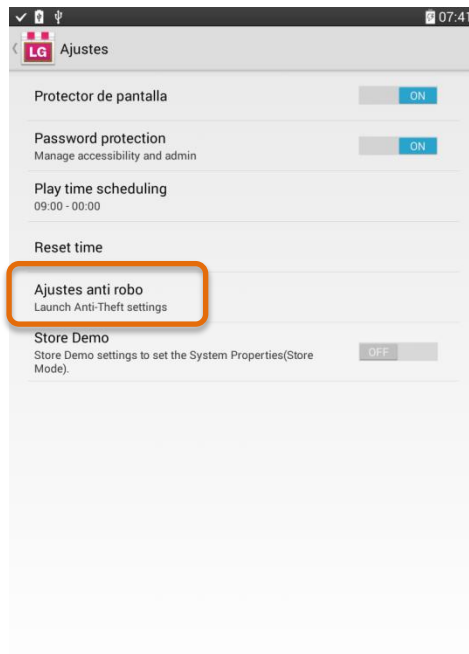

4. Nuevamente nos pide una contraseña. En este caso la contraseña es “1987” ó “0000”:

The screenshot shows the LG Anti-theft application interface. At the top, there is a status bar with the time 07:43. Below it, the app title "Anti-theft" is displayed. The main heading is "Introducir contraseña" (Enter password), which is highlighted with an orange box. Below this heading, the password "1987" is entered into a text field. To the right of the text field is a checkbox labeled "Hacer visible" (Make visible) which is checked. At the bottom of the screen, there are two buttons: "Cancelar" (Cancel) and "Aceptar" (Accept). Below these buttons is a numeric keypad with digits 1 through 9, 0, and a backspace key (indicated by an 'x' in a circle). The keypad is organized into a 4x3 grid.

Cancelar		Aceptar	
1	2	3	
4	5	6	
7	8	9	
⌫	0	Hecho	

The screenshot shows the LG Anti-theft application interface. At the top, there is a status bar with the time 07:43. Below it, the app title "Anti-theft" is displayed. The main heading is "Introducir contraseña" (Enter password), which is highlighted with an orange box. Below this heading, the password "0000" is entered into a text field. To the right of the text field is a checkbox labeled "Hacer visible" (Make visible) which is checked. At the bottom of the screen, there are two buttons: "Cancelar" (Cancel) and "Aceptar" (Accept). Below these buttons is a numeric keypad with digits 1 through 9, 0, and a backspace key (indicated by an 'x' in a circle). The keypad is organized into a 4x3 grid.

Cancelar		Aceptar	
1	2	3	
4	5	6	
7	8	9	
⌫	0	Hecho	

5. Tras introducir la contraseña seleccionamos aceptar y se abren los ajustes antirrobo. Tenemos que deseleccionar el check en “Anti-theft” y la alarma quedará desactivada.

