


- e. Check floor plan view orientation:

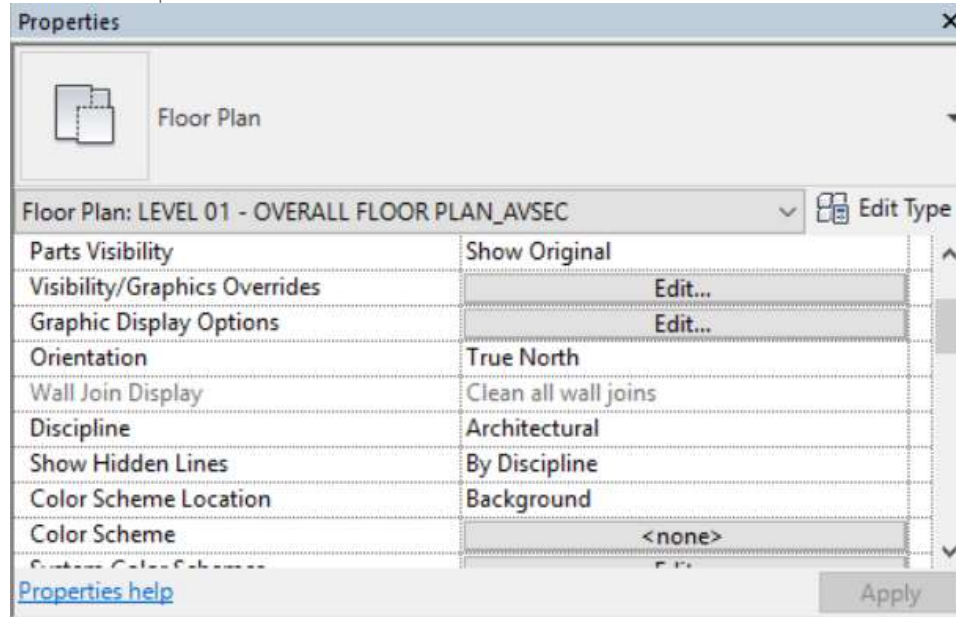

The screenshot shows the 'Properties' dialog box for a 'Floor Plan' view. The dialog has a title bar with a close button. Below the title bar is a section with a floor plan icon and the text 'Floor Plan'. Below this is a dropdown menu showing 'Floor Plan: LEVEL 01 - OVERALL FLOOR PLAN_AVSEC' and an 'Edit Type' button. The main area contains a table of properties and their values. The properties are: 'Parts Visibility' (Show Original), 'Visibility/Graphics Overrides' (Edit...), 'Graphic Display Options' (Edit...), 'Orientation' (True North), 'Wall Join Display' (Clean all wall joins), 'Discipline' (Architectural), 'Show Hidden Lines' (By Discipline), 'Color Scheme Location' (Background), and 'Color Scheme' (<none>). At the bottom left is a 'Properties help' link, and at the bottom right is an 'Apply' button.

Property	Value
Parts Visibility	Show Original
Visibility/Graphics Overrides	Edit...
Graphic Display Options	Edit...
Orientation	True North
Wall Join Display	Clean all wall joins
Discipline	Architectural
Show Hidden Lines	By Discipline
Color Scheme Location	Background
Color Scheme	<none>