


## Rate Map

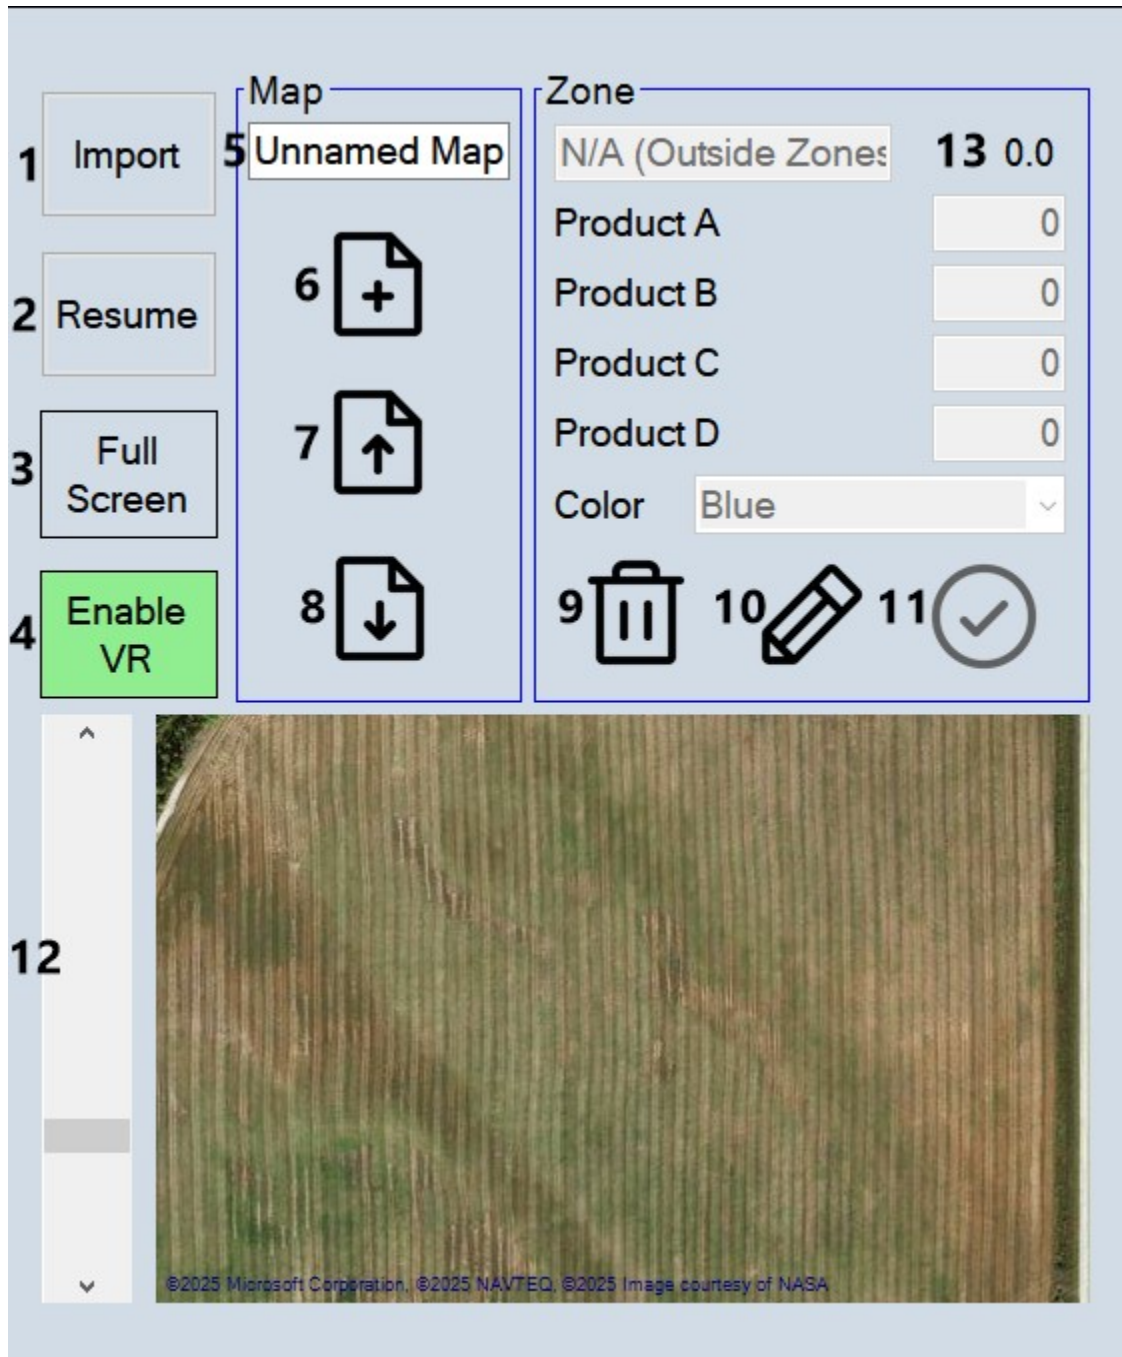

Files are save in the folder 'RateMap' in 'Documents'. Each map has its own folder in 'RateMap'. There is also the folder 'MapCache'. This is a cache of the maps so that the map can be used offline.

## 1. Import

- Press the Import button to open the Import form. Load an alternative type of shape file using the up-arrow on the Import form. The form will list the RC attributes on the left. Use the drop-down box to the right of each RC attribute to cross reference from the alternative file attributes. Use the down-arrow on the Import form to save a new RC shape file with these cross referenced attributes.
- To use the new RC shape file open it with the up-arrow (7) on the Rate Map form.

## 2. Resume

- Load previous file.

## 3. Full Screen

## 4. Enable VR

- Enable variable rate control. Each product uses variable rate control. All zones must define a rate for each product used.

## 5. Map name.

## 6. New map.

## 7. Load map.

## 8. Save map.

## 9. Delete zone.

## 10. Edit zone.

## 11. Save edit.

12. Map zoom.
13. Area, hectares or acres.