

File - Rate Map

Create zones by clicking button 1 then click at least 3 points on the map. With overlapping zones the last zone added has priority. When variable rate is enabled and no zone exists the base rate is used.

Zones	Data	Files
1	Name	Base Rate
2	Acres	0.0
3	Product A	7.5
4	Product B	0.0
5	Product C	0.0
	Product D	0.0
	Color	Blue

6 Window

7 Enable VR


8 Zones

9 Sat View

10 Rate Data

11 KML Files

1. Create a new rate zone.
2. Edit rate zone properties.
3. If creating a zone, delete corner. If editing a zone, delete zone.
4. Cancel edits.
5. Save edits.
6. Preview window.
7. Enable variable rate control.
8. Toggle rate zones.
9. Toggle satellite view.
10. Toggle applied rate display.
11. Toggle KML display.

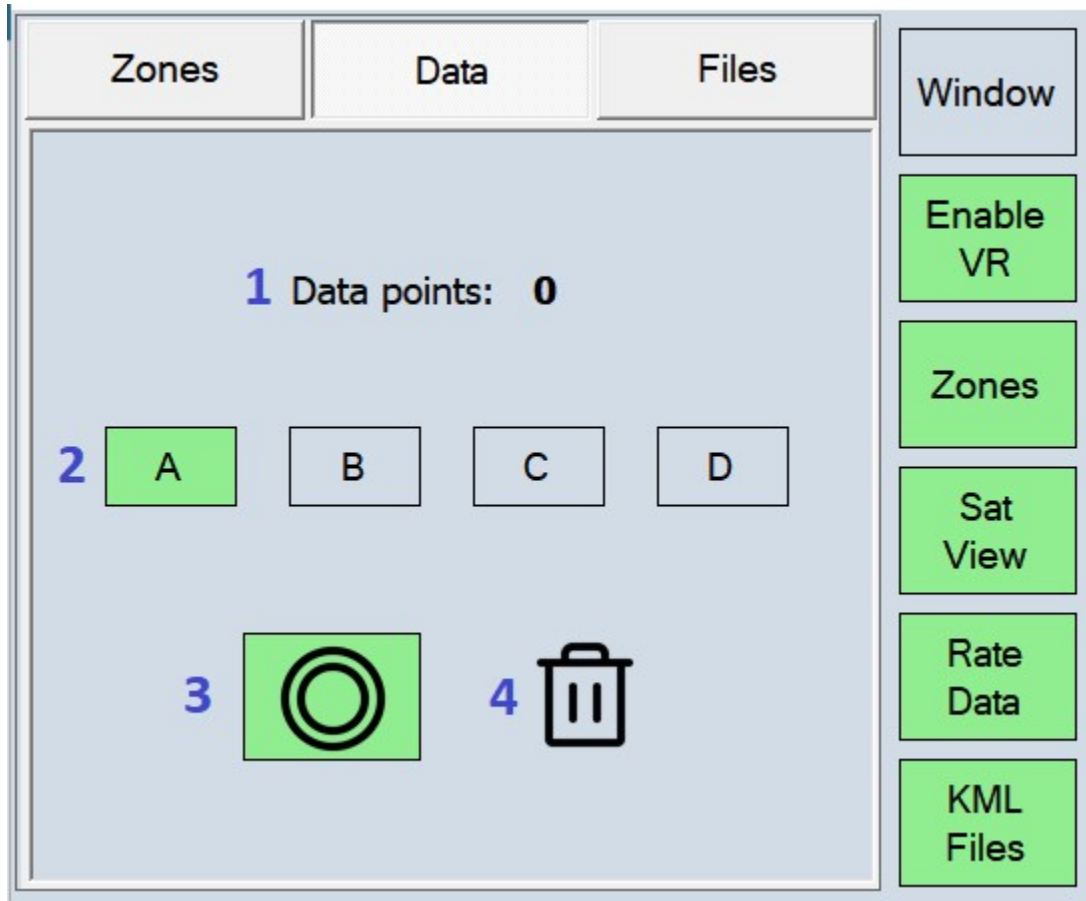

1. Data Records.
2. Product applied rate to display.
3. Record applied rates.
4. Delete applied rate data.