


Rate Map

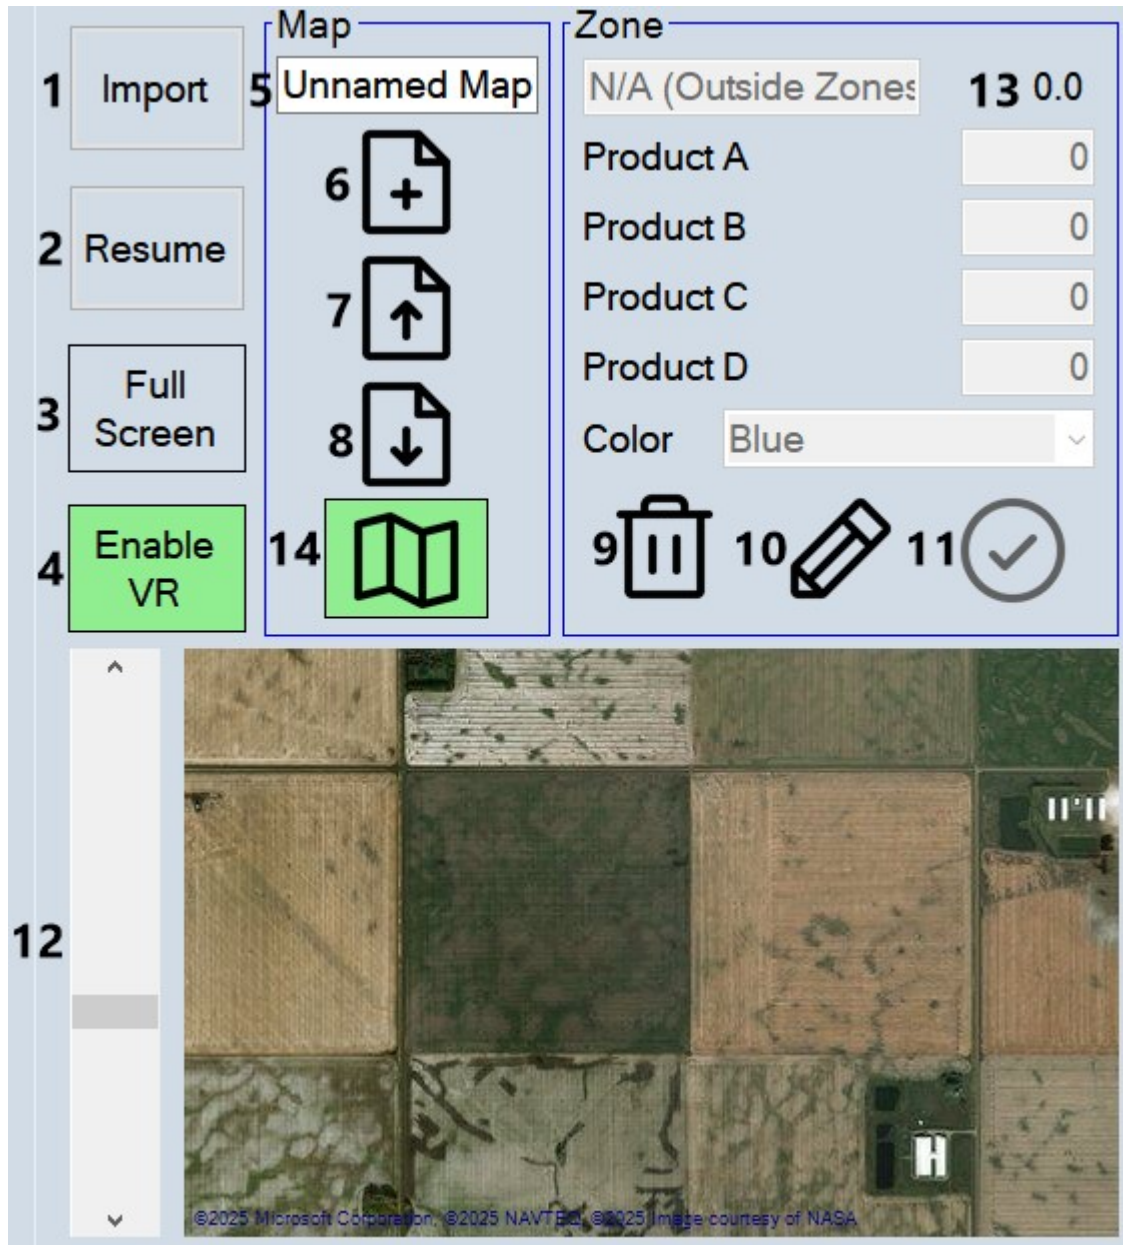

Files are save in the folder 'RateMap' in 'Documents'. Each map has its own folder in 'RateMap'. There is also the folder 'MapCache'. This is a cache of the maps so that the map can be used offline.

1. Import

- Press the Import button to open the Import form. Load an alternative type of shape file using the up-arrow on the Import form. The form will list the RC attributes on the left. Use the drop-down box to the right of each RC attribute to cross reference from the alternative file attributes. Use the down-arrow on the Import form to save a new RC shape file with these cross referenced attributes.
- To use the new RC shape file open it with the up-arrow (7) on the Rate Map form.

2. Resume

- Load previous file.

3. Full Screen

4. Enable VR

- Enable variable rate control. Each product uses variable rate control. All zones must define a rate for each product used.

5. Map name.

6. New map.

7. Load map.

8. Save map.

9. Delete zone.

10. Edit zone.

11. Save edit.

12. Map zoom.
13. Area, hectares or acres.
14. Use map tiles.