


## Deleting Pictures

Use the **DRIVE/DELETE** button to delete pictures.

**!** Deleted pictures cannot be recovered. Protect important pictures or copy them to a computer or other storage device before proceeding.

- 1 With a picture displayed full frame, press the **DRIVE/DELETE** button and select **FRAME**.

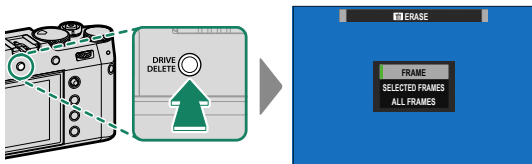

- 2 Press the focus stick (focus lever) left or right to scroll through pictures and press **MENU/OK** to delete (a confirmation dialog is not displayed). Repeat to delete additional pictures.

- 🔒** Protected pictures cannot be deleted. Remove protection from any pictures you wish to delete (📖 186).
- Pictures can also be deleted from the menus using the **📺 PLAY BACK MENU > ERASE** option (📖 182).