




The Viewfinder Window


Use the viewfinder selector to switch between the electronic viewfinder (EVF) and the optical viewfinder (OVF). In addition, a small electronic rangefinder (ERF) window can be displayed in the OVF.

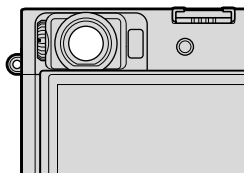

Switching Between the EVF and OVF

To switch between the EVF and OVF, pull the viewfinder selector as shown.

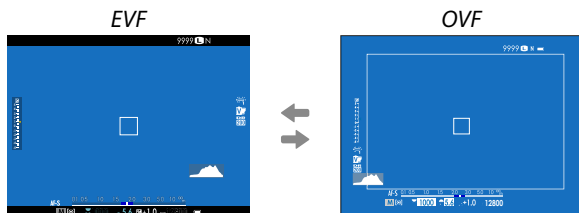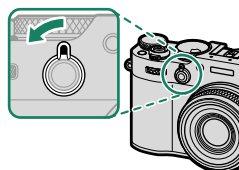

 The camera automatically switches from the OVF to the EVF during movie recording.