



## The Focus Stick (Focus Lever)


Tilt or press the focus stick to select the focus area. The focus stick can also be used to navigate the menus.

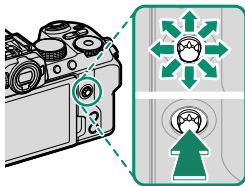







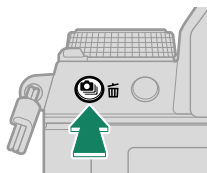

- To choose the role played by the focus stick, press and hold the center of the stick or use **FUNCTION/DIAL SETTING > FOCUS LEVER SETTING**.
- Use **AF/MF SETTING > WRAP FOCUS POINT** to choose whether focus-area selection is bounded by the borders of the display or "wraps around" from one edge of the display to another.

## (Drive) Button

Pressing the  (drive) button displays drive-mode menu, where you can choose from the following the drive modes.



Mode			Mode		
	Single frame	68	<b>BKT</b>	Bracketing	112
	High-speed burst	115		HDR	116
	Low-speed burst	115		Panorama	118
	ISO BKT	111		Multiple exposure	121
	WHITE BALANCE BKT	111			