
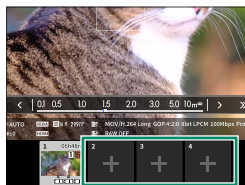



## Connecting by scanning a QR code

 To connect a second or subsequent camera by scanning a QR code, set **SERVER TYPE** of the first camera and second and subsequent cameras to **HTTPS** in advance.

- 1 Select **INFORMATION** > **HARDWARE INFO** in the network/USB setting menu.  
A QR code is displayed.
- 2 Tap the thumbnail of the + mark in the “Choose camera” area.



- 3 Tap “Connect via QR Code” to scan the QR code displayed by the camera.  
The remote recording display will appear in the browser.

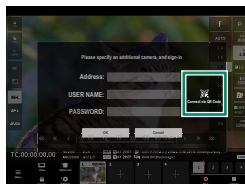

### Disconnecting a second or subsequent camera

To end a connection after adding a camera, select the “remove connected device” option in the “Remote recording” menu and click or tap the thumbnail for the camera you want to remove.