



The Serial Number Plate

Do not remove the serial number plate, which provides the CMIIT ID, serial number, and other important information.

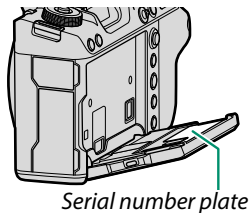


The Memory Card Slot Cover (Detachable)


The memory card slot cover can be removed by lowering the interior latch. Remove the cover for ease of access when a camera rig is attached or in other situations that make it difficult to open or close the cover.

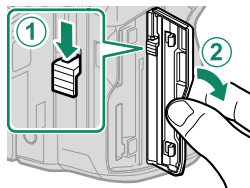

The Focus Stick (Focus Lever)

Tilt or press the focus stick to select the focus area. The focus stick can also be used to navigate the menus.

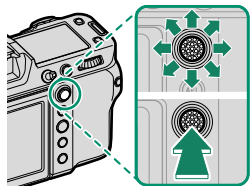

 To choose the role played by the focus stick, press and hold the center of the stick or use **■ BUTTON/DIAL SETTING > FOCUS LEVER SETTING**.