
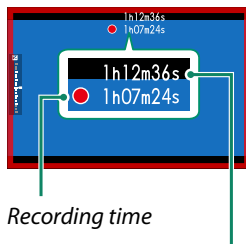


## Using a Function Button (MOVIE RECORDING RELEASE)

Use the function button to which **MOVIE RECORDING RELEASE** is assigned to quickly and easily record movies while in still photography mode.

 The camera automatically selects focus mode **C** (AF-C); exposure is adjusted automatically.

- 1 Assign **MOVIE RECORDING RELEASE** to a function button (📖 321).
- 2 Press the selected button to start recording.
  - A recording indicator (●) is displayed while recording is in progress.
  - The borders of the display turn red during movie recording, green during high-speed recording.
  - The time remaining is shown by a countdown display, while another display counts up to show the recording time.
- 3 Press the button again to end recording. Recording ends automatically when the maximum length is reached or the memory card is full.



*Recording time*

*Time remaining*