


The LCD Monitor

The LCD monitor can be tilted for easier viewing, but be careful not to touch the wires or trap fingers or other objects behind the monitor. Touching the wires could cause camera malfunction.

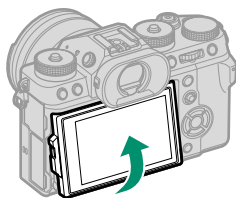

The LCD monitor also functions as a touch screen that can be used for:

- Touch photography (📖 27)
- Focus area selection (📖 26)
- Function selection (📖 29)
- Movie optimized control (🎞️) (📖 28)
- Playback (📖 31)

“Tall” (Portrait) Orientation

The display can also be tilted to take pictures from high or low angles when the camera is rotated to take pictures in “tall” (portrait) orientation.

- Press the tilt lock release and tilt the display as shown in Figure 1.
- To take high-angle shots, hold the camera in the orientation shown in Figure 2.

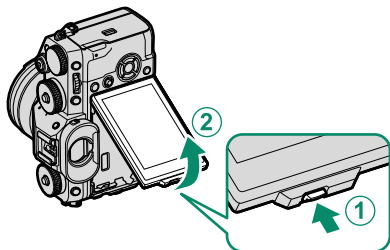


Figure 1

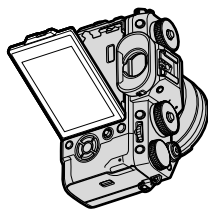


Figure 2