



## Taking Photographs (Mode P)

This section describes how to take pictures using program AE (mode P). See pages 72–81 for information on S, A, and M modes.

- 1 Rotate the **STILL/MOVIE** mode dial to **STILL**.

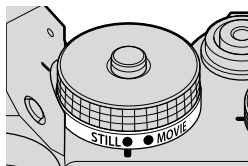


- 2 Slide the lens aperture mode switch to **A**.

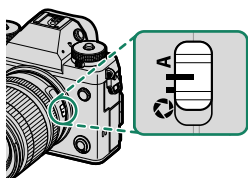

- 3 Rotate the shutter speed dial to **A**.

**!** To use the shutter speed dial, press the dial lock release and rotate the dial to the desired setting.

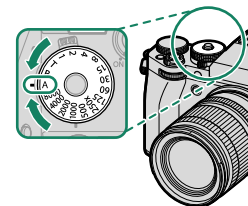

**P** will appear in the display.

