



IMAGE QUALITY SETTING (Movie Recording)


Adjust image quality settings for movies.

To display image quality settings, press **MENU/OK** in the movie shooting display and select the **IQ** (IMAGE QUALITY SETTING) tab.

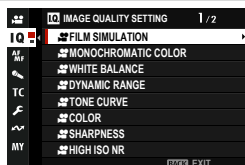


 The options available vary with the shooting mode selected.

FILM SIMULATION

Options are the same as those for still photography, but settings must be adjusted separately ( 122).

MONOCHROMATIC COLOR

Options are the same as those for still photography, but settings must be adjusted separately ( 124).