


Custom Modes


Rotate the mode dial to any of modes **C1 (CUSTOM 1)** through **C4 (CUSTOM 4)** to take pictures using previously-saved shooting menu settings.

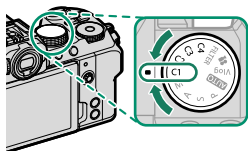


Mode Selection: Still Photography or Movie

Choose whether the selected custom settings bank (**C1** through **C4**) is for still photography (**STILL**) or movie recording (**MOVIE**).

- 1 Navigate to **IMAGE QUALITY SETTING** in the photo menus, highlight **CUSTOM MODE SETTING**, and press **MENU/OK**.

 You can also use **MOVIE SETTING > CUSTOM MODE SETTING** in the movie menus.

- 2 Highlight the desired custom settings bank and press **MENU/OK**.

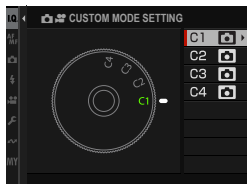

- 3 Highlight **STILL** or **MOVIE** and press **MENU/OK**.

The selected custom settings bank can now be used for still photography or movie recording.

