


Using the Menus


To display the menus, press **MENU/OK**.

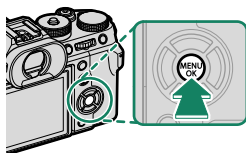


The Menus

Different menus are displayed during still photography, movie recording, and playback.

Shooting

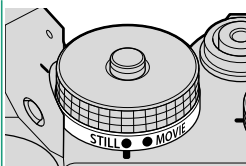


STILL/MOVIE mode dial
rotated to **STILL**

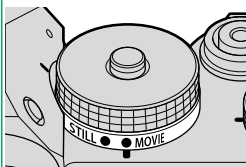

STILL/MOVIE mode dial
rotated to **MOVIE**



Playback

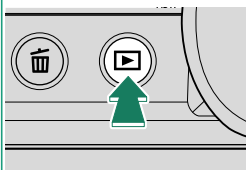

During playback

