





Editing the Quick Menu

To choose the items displayed in the quick menu:

- 1 Press and hold the **Q** button during shooting.
Photo or movie **EDIT/SAVE QUICK MENU** options will be displayed.

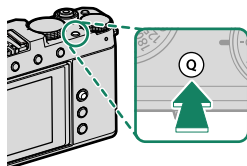

- 2 Highlight the item currently in the position you wish to edit and press **MENU/OK**.
- 3 Highlight the desired item and press **MENU/OK** to assign it to the selected position.

 The quick menus can also be edited using **FUNCTION/DIAL SETTING >**
 **EDIT/SAVE QUICK MENU** or  **EDIT/SAVE QUICK MENU**.