


Using the Menus

To display the menus, press **MENU/OK**.


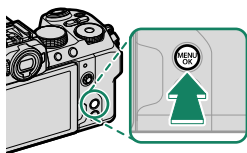


The Menus

Different menus are displayed during still photography, movie recording, and playback.

Still Photography (All Modes Except (Movie) and Vlog)

Pressing **MENU/OK** during still photography displays the photo menu.

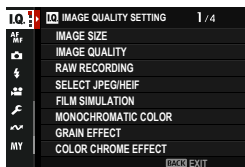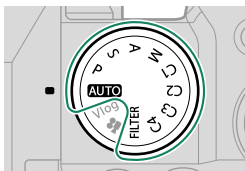

In modes **C1** through **C4**, photo menus will be displayed if  **STILL** is selected for the chosen bank using either **IQ. IMAGE QUALITY SETTING >   CUSTOM MODE SETTING** in the photo menu or **MOVIE SETTING >   CUSTOM MODE SETTING** in the movie menu (82).