


## The STILL/MOVIE Mode Switch


Slide the **STILL/MOVIE** mode switch to **STILL** to take photographs or to **MOVIE** to record movies.

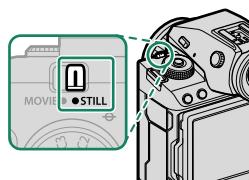







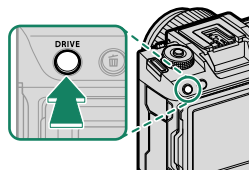


## The DRIVE Button

Press the **DRIVE** button to adjust shooting settings. The options displayed vary with the position of the **STILL/MOVIE** mode switch.

- Pressing the button when **STILL** is selected displays drive mode options.



Mode		
	Single frame	76
	High-speed burst	117
	Low-speed burst	117
	ISO BKT	113
	WHITE BALANCE BKT	113
	Bracketing	114

Mode		
	Multiple exposure	119
	PIXEL SHIFT MULTI SHOT ACCURATE COLOR	121
	PIXEL SHIFT MULTI SHOT HIGH RESOLUTION + ACCURATE COLOR	121

- Pressing the button when **MOVIE** is selected displays movie recording options.

Option
Frame size
Aspect ratio
Frame rate