


## Vlog

When the mode dial is rotated to **Vlog**, the shutter button can be used to record movies at settings appropriate for vlogs (video blogs). Settings can be adjusted using touch controls.

Settings for **Vlog** mode are stored separately from those used when movies are recorded in **Movie** mode or via the **Movie** button.

### 1 Rotate the mode dial to **Vlog**.

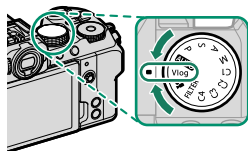

**Vlog** will appear in the display.



To view shooting settings, tap the **Vlog** button.

- Tap **Back** to return to the shooting display.
- To exit to full-frame playback, tap **Full Frame Playback** (64).



- Selecting **ON** for **BACKGROUND DEFOCUS MODE** fixes aperture at the widest value for the lens.
- To maintain focus on an object in the foreground, as for example when filming a product review, select **ON** for **PRODUCT PRIORITY MODE**.