
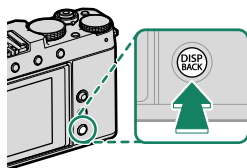


The DISP/BACK Button

The **DISP/BACK** button controls the display of indicators in the viewfinder and LCD monitor.

 Indicators for the EVF and LCD must be selected separately. To choose the EVF display, place your eye to the viewfinder while using the **DISP/BACK** button.



Viewfinder (EVF)

Standard indicators




*Full screen
(no indicators)*



LCD Monitor

Standard indicators

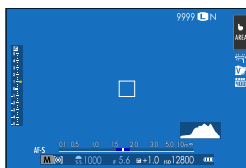

No indicators



Info display (still photography only)