



### Removing the Battery

Before removing the battery or memory card, *turn the camera off* and open the battery-chamber cover.


To remove the battery, press the battery latch to the side, and slide the battery out of the camera as shown.

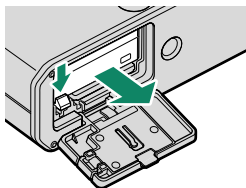


 The battery may become hot when used in high-temperature environments. Observe caution when removing the battery.

### Removing Memory Cards

To remove the memory card, press it in and release it slowly. The card can then be removed by hand.

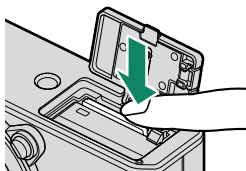

 • Press the center of the card when ejecting it.  
• When a memory card is removed, the card could be ejected too quickly. Use your finger to hold it and gently release the card.