




- To disable touch controls and hide the touch screen mode indicator, select **OFF** for **☑️ BUTTON/DIAL SETTING > TOUCH SCREEN SETTING > 📷 TOUCH SCREEN SETTING**.
- Touch control settings can be adjusted using **AF/MF SETTING > TOUCH SCREEN MODE**. For information on the touch controls available during movie recording, see “Movie Recording (📷 TOUCH SCREEN MODE; 📖 210)”.

MOVIE OPTIMIZED CONTROL 🎬

Selecting **ON** for **📷 MOVIE SETTING > MOVIE OPTIMIZED CONTROL 🎬** or tapping the movie-optimized mode button in the shooting display optimizes the command dials and touch controls for movie recording. This can be used to prevent camera sounds being recorded with movie footage.

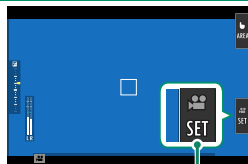

Movie-optimized mode button

- | | |
|-------------------------|---------------------|
| • SHUTTER SPEED | • WIND FILTER |
| • APERTURE | • HEADPHONES VOLUME |
| • EXPOSURE COMPENSATION | • 🎬 FILM SIMULATION |
| • ISO | • 🎬 WHITE BALANCE |
| • INTERNAL MIC LEVEL | • 🎬 IS MODE |
| ADJUSTMENT/EXTERNAL MIC | • 🎬 IS MODE BOOST |
| LEVEL ADJUSTMENT | |



- Enabling movie-optimized controls disables the aperture ring and the shutter-speed, sensitivity, and exposure compensation dials.
- When movie-optimized control is enabled, the movie-optimized mode button can be used to change shooting settings or disable movie-optimized control.