



Mode M: Manual Exposure


In manual mode, the user controls both shutter speed and aperture. Shots can be deliberately overexposed (brighter) or underexposed (darker), opening the door for a variety of individual creative expression. The amount the picture would be under- or over-exposed at current settings is shown by the exposure indicator; adjust shutter speed and aperture until the desired exposure is reached.

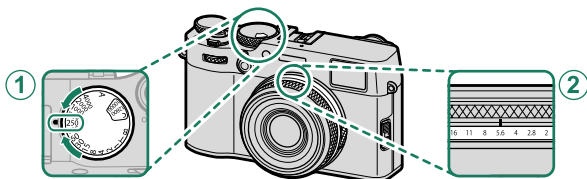

Setting	
① Shutter speed	User-selected
② Aperture	User-selected

Confirm that **M** appears in the display.

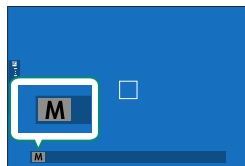

 Shutter speed can be adjusted in increments of $\frac{1}{3}$ EV by rotating the rear command dial.