


## Power Zoom Lenses

Zoom can be adjusted on power zoom lenses using the zoom/focus control ring, zoom button, or zoom ring.

⚠ Adjusting zoom while the lens is wet makes it easier for water to find its way inside the lens. Wipe any water from the lens before adjusting zoom.

📷 A XF18-120mmF4 LM PZ WR lens is used here for illustrative purposes.

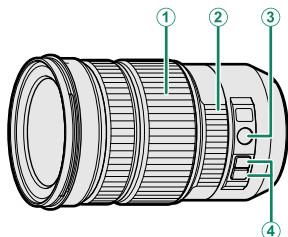

Control	Description
① <b>Zoom ring</b>	Rotate the zoom ring to zoom in or out manually.
② <b>Zoom/focus control ring</b>	Rotate the zoom/focus control ring to zoom in or out using powered zoom. The zoom speed is proportional to the speed with which the ring is rotated.
③ <b>Z/F (zoom/focus) button</b>	Switch the role of zoom/focus control ring from focus to zoom or <i>vice versa</i> .
④ <b>Zoom buttons</b>	Press a zoom button to zoom in or out at a steady speed using powered zoom. Zoom ends when the button is pressed a second time.

- 📷 • The **Z/F** and zoom buttons can be assigned other roles using **⚙️ BUTTON/DIAL SETTING > POWER ZOOM LENS FUNCTION (Fn) SETTING**.
- The speed at which zoom can be adjusted via the zoom buttons can be chosen using **⚙️ BUTTON/DIAL SETTING > LENS ZOOM/FOCUS SETTING**.