

Inserting the Battery

Insert the battery in the camera as described below.

1 Open the battery-chamber cover.

Slide the battery-chamber cover latch as shown and open the battery-chamber cover.


①



! • Do not open the battery-chamber cover when the camera is on. Failure to observe this precaution could damage image files or memory cards.

• Do not use excessive force when handling the battery-chamber cover.

②

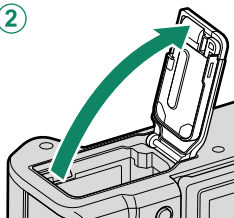

2 Insert the battery as shown.

! • Insert the battery in the orientation shown. *Do not use force or attempt to insert the battery upside down or backwards.*

• Confirm that the battery is securely latched.

