


Front Command Dial Roles by Mode

The roles that can be performed by the front command dial in each mode are listed below.

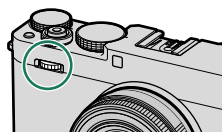

The roles assigned to the front command dial during shooting can be chosen using **FUNCTION/SETTING > COMMAND DIAL SETTING** (226). At default settings, the dial can be used in the following three roles:

- **FRONT COMMAND DIAL 1: S.S. (PROGRAM SHIFT) (SS)**
- **FRONT COMMAND DIAL 2: APERTURE (F)**
- **FRONT COMMAND DIAL 3: EXPOSURE COMPENSATION (E)**

Press the center of the front command dial to cycle through roles 1, 2, and 3.


	Role assigned to front command dial		
	SS	F	E
P (PROGRAM AE)	Program shift	Program shift ¹ Aperture ^{2, 3}	Exposure compensation ⁴
S (SHUTTER PRIORITY AE)	Shutter speed	Aperture ³	
A (APERTURE PRIORITY AE)	None	None	
M (MANUAL)	Shutter speed	Aperture ³	None

1 Shutter speed dial set to **P**.

2 Shutter speed dial set to **A**.

3 Lens with no aperture ring, or lens equipped with an aperture ring set to **A** (auto) with **COMMAND** selected for **FUNCTION/SETTING > APERTURE RING SETTING (A)**. Aperture adjustment via front command dial not otherwise available.

4 Exposure compensation dial rotated to **C**.

 To adjust sensitivity using the front command dial, assign **ISO** to any of the front command dial roles 1 through 3 using **FUNCTION/SETTING > COMMAND DIAL SETTING** (226).