
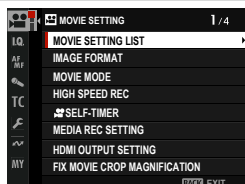


MOVIE SETTING (Movie Recording)

Adjust movie-recording options.

To display options for movie recording, press **MENU/OK** in the movie shooting display and select the  (**MOVIE SETTING**) tab.



MOVIE SETTING LIST



View current movie recording settings.

 These options can also be viewed by pressing the **DISP/BACK** button while the movie quick menu is displayed.

IMAGE FORMAT

You can change the format of movies to be shot depending on the lens to be used. Frame size and aspect ratio are set by **MOVIE MODE**.

Option	Description
GF	Shoot in the optimal format for GF Series lenses.
Premista	Shoot in the optimal format for Premista Series lenses.
35mm	Shoot in the optimal format for 35-mm format lenses.
ANAMORPHIC(35mm)	Shoot in the optimal format for anamorphic lenses. You can configure the lens magnification or whether to use the desqueeze display when taking pictures.

-  When **ANAMORPHIC(35mm)** is set, an anti-vibration function operates to match the configured magnification. Do not set **ANAMORPHIC(35mm)** when using a lens other than an anamorphic lens.
- When ** MOVIE SETTING > HDMI OUTPUT SETTING > HDMI OUTPUT INFO DISPLAY** is set to **OFF**, HDMI output does not use the desqueeze display, even when desqueeze display is set to ON for **ANAMORPHIC(35mm)**.